



## ELECTROMAGNETIC FLOWMETER

SENSORS:	MUT 500	MUT 2400
	MUT 1000	MUT 2500
	MUT 1100	MUT 2700
	MUT 2200	MUT 2770

with

CONVERTER MC 106

USE HANDBOOK TD 121ENG



MARCH 2001

**KOMPONENTAUTOMATIC AB**  
LEIF LINDGREN

Box 265 • 771 26 Ludvika  
Telefon 0240-150 09 • Fax 0240-61 11 08  
[www.komponentautomatic.se](http://www.komponentautomatic.se)

COMPANY  
WITH QUALITY SYSTEM  
CERTIFIED BY DNV  
**ISO 9001**

## SYMBOLS MEANING



WARNING: please refer to the concerning documentation enclosed with the goods



WARNING: electric shock danger

Operations with this symbol must be performed by skilled technicians only

\* \* \*

THE SECTIONS OF THIS OPERATING MANUAL THAT MUST NECESSARILY BE READ BEFORE INSTALLING THE FLOWMETER ARE:

page	paragraph	subject
S 6	7.2	Liquid direction inside the sensor
S 7	7.4	Grounding
C 5	12.3.1	Connections between converter and sensor (for separate version only)
C 7	12.3.5	Grounding of the housing
C 7	12.3.6	Network connection
C 9	12.4.3	Data display choice

IT IS ALSO NECESSARY THAT YOU VIEW THE

### PRESETTINGS SHEET

HANDED ALONG WITH THE FLOWMETER.

THERE, YOU WILL FIND THE MAIN PARAMETERS VALUES SET IN FACTORY.

PLEASE CHECK CAREFULLY IF THE FOLLOWING MEETS YOUR REQUIREMENTS:

parameters	function
full scale flowrate (f.s.)	01
DN	11
volume per pulse	02

By using the function shown on the second column you may change the relative parameters (see paragraph 12.4.6).

## INDEX

	pag.
SYMBOLS MEANING	ii
THE SECTIONS OF THIS OPERATING MANUAL THAT MUST NECESSARILY BE READ	ii
The sensor - preliminary informations	S 1
1 - MUT 500	S 1
2 - MUT 501	S 1
3 - MUT 1000	S 1
4 - MUT 1100	S 2
5 - MUT 2200	S 3
6 - MUT 2400	S 3
7 - MUT 2500	S 4
8.1 - sensor installation	S 5
8.2 - Liquid direction inside the sensor: how to make sense of the double arrow	S 6
8.3 - Other rules for a correct installation	S 6
8.4 - grounding	S 7
9 - Piping pressure minor than atmospheric pressure: sensors operating	S 9
Insertion magnetic flow meter	S 10
10 - MUT 2700 - Insertion magnetic flow meter	S 11
10.1 - summarized description of the structure of the MUT 2700	S 11
10.2 - the component parts	S 11
Drawing D020H0: orientation of electrodes axix	S 12
10.3 - Assembly on pressurized pipes	S 13
Drawing D021H0: The penetration of the sensor inside the pipe	S 14
10.4 - The penetration of the sensor inside the pipe	S 15
10.5 - Disassembly of the meter	S 15
10.6 - Grounding the meter	S 15
10.7 - MUT 2770 - Insertion magnetic flow meter	S 16
drawing D012D0127 separate version - overall dimensions	S 17
10.8 - MUT 2660 - Insertion magnetic flow meter	S 19
11 - Installation of insertion magnetic flow meter	S 21
11.1 - Piping pressure minor than atmospheric pressure: sensors operating	S 22
12 - Converter MC 106	C 1
12.1 - General	C 1
12.2 - Installation	C 1
12.2.1 - MC 106 A - MC 106 C - Compact version	C 1
12.2.2 - MC 106 A - MC 106 C - Separate version and MC 106 B	C 1
12.3 - ELECTRICAL CONNECTIONS	C 4
12.3.1 - CONNECTION BETWEEN CONVERTER AND SENSOR	C 5
12.3.4 - ON/OFF OUTPUT	C 6
12.3.5 - GROUNDING THE HOUSING	C 7
12.3.6 - CONNECTION TO THE ELECTRICAL MAIN	C 7
12.3.7 - FUSE	C 8
12.4 - PRESETTING OF MC 106 CONVERTER	C 9
12.4.2 - USE OF THE KEYBOARD	C 9
12.4.3 - SCHOICE OF THE TYPE OF DATA TO BE DISPLAYED	C 9
12.4.4 - ALARM DISPLAY	C 10
12.4.5 - DATA AND TIME DISPLAY	C 10
12.4.5 - PARAMETER DISPLAY OR MODIFICATION	C 10
12.4.6 - THE ENTRY OF A NEW NUMERICAL VALUE	C 10

12.4.8 - THE ENTRY OF OTHER DATA	C 10
12.4.9 - ON/OFF OUTPUT	C 11
12.5 - EXAMPLES OF PROGRAMMING	C 11
12.6 - ACCESS LEVELS AND RESPECTIVE ACCESS CODE KEY	C 13
12.7 - CONFIGURATION FUNCTIONS AVAILABLE	C 14
APPENDIX 1: TRANSFORMATION FROM COMPACT TO SEPARATE VERSION	A 1
APPENDIX 2: The meaning - operation - programming methods for a number of functions	A 2
Functions: 5 (response delay) 38 (maximum variance) 39 (response speed threshold)	A 2
A2.2.- Function 10 (factory pre-setting)	A 4
A2.3.- Function 14 (output signal type)	A 4
A2.4 - Functions: 17 (dual range) 18 ( autoranging)	A 6
A2.5 - Functions 20 and 21 (current range / frequency extension)	A 7
A2.6 - Functions 45 e 46 (malfunction current / frequency value))	A 7
A2.7 - "Empty tube" circuit functions	A 8
A2.8 - Function 47 (automatic zero-set calibration)	A 9
A.2.9 - Function 81 (flow rate simulation)	A 9
APPENDIX 3: ERROR OR ALARM MESSAGES VISUALIZED ON THE DISPLAY	A 10
APPENDIX 4: INCONVENIENCES AND SOLUTIONS	A 12

The flowmeter, whose this operating manual refers, satisfies the Standard EN 50082-2 (immunity) and EN50081-2 (emission) and belongs to class A.

## THE SENSOR - PRELIMINARY INFORMATION


Electromagnetic flowmeters are composed of:

the *sensor* that must be mounted between two portions of pipe by flanges, threaded joints or triclamp joints;

the *converter* that can be mounted on the sensor (compact version) or nearby (separate version); in this case it is connected to the sensor by two cables C012 and C013.

This manual relates to the following sensor models:

### 1. MUT 500

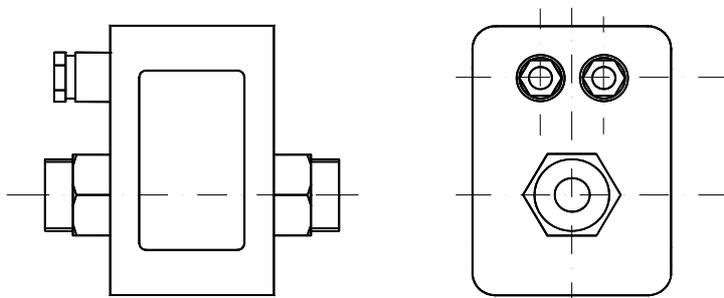

Body and joints in AISI 316 (joints in hastelloy, on request)

threaded male UNI 338 ( NPT on request)

Available diameters: DN 3-6-10-15-20 mm


Lining in PTFE (white)

Pressure: standard PN16 (others on request)

Maximum temperature in separate version: 130°C

Maximum temperature in compact version: 80°C

### 2. MUT 501

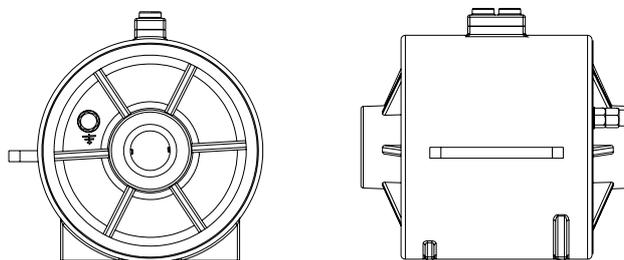

Body and joints in Polypropylene

threaded female UNI 338 ( NPT on request)


Available diameters: DN 3-6-10-15-20 mm

Lining: Polypropylene

Standard Pressure:PN10

Maximum Temperature : 60°C

### 3. MUT 1000 (WAFER)

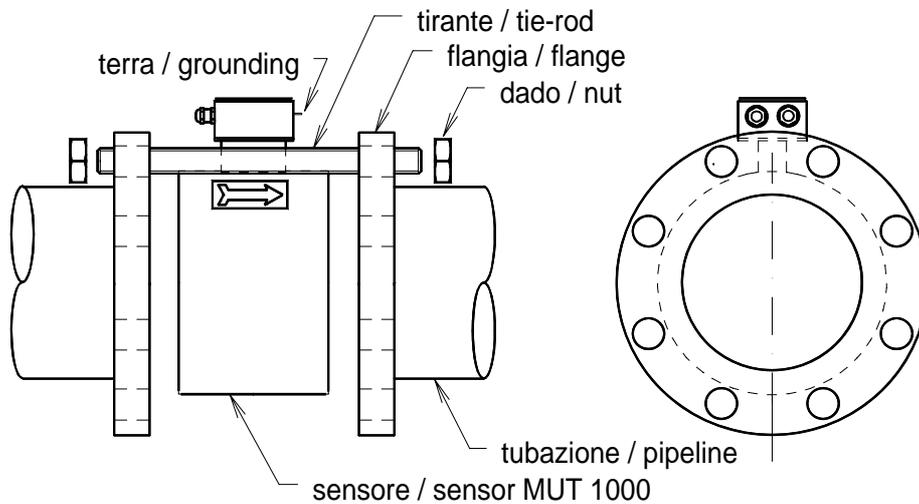


Available diameters from DN 40 to DN 300

Installed between two counter flanges (see tab. 1)

Tight by threaded tie-rods (see tab.1)

Lining in PTFE (white)

### 4. MUT 1100 (WAFER)

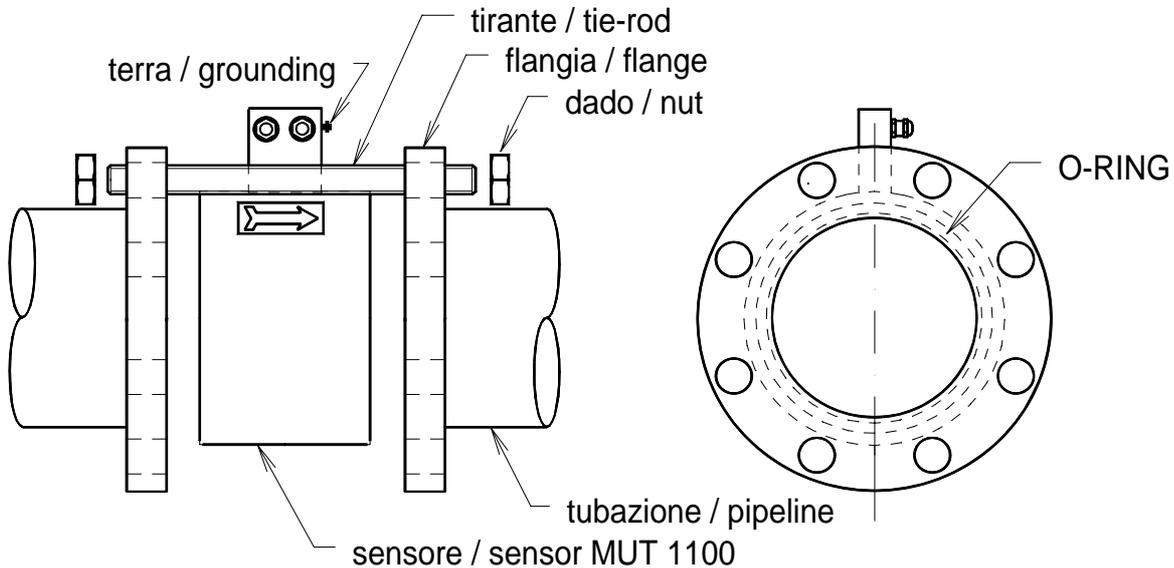

Available diameters from DN 40 to DN 200

Installed between two counter flanges (see tab. 1)

Tight by threaded tie-rods (see tab.1)

Lining in polypropylene


Maximum Pressure: 10 bar

Maximum liquid Temperature: 60°C

Table 1

DN		USABLE FLANGES, DIAMETERS and N° of TIE-RODS										sensor length	
mm	"	PN16		PN25		PN40		ANSI150		ANSI300		MUT 1000	MUT 1100
40	1"1/2	M16	4	M16	4	M16	4	no	---	3/4"	4	100 mm	100 mm
50	2	M16	4	M16	4	M16	4	no	---	5/8"	8	100 mm	100 mm
65	2"1/2	M16	4	M16	8	M16	8	no	---	3/4"	8	150 mm	150 mm
80	3	M16	8	M16	8	M16	8	no	---	3/4"	8	150 mm	150 mm
	3"1/2	---	---	---	---	---	---	5/8"	8	3/4"	8	150 mm	150 mm
100	4	M16	8	M20	8	M20	8	5/8"	8	3/4"	8	150 mm	150 mm
125	5	M16	8	M22	8	M22	8	3/4"	8	3/4"	8	180 mm	180 mm
150	6	M20	8	M22	8	M22	8	3/4"	8	3/4"	12	180 mm	180 mm
200	8	M20	12	M22	12	M27	12	3/4"	8	7/8"	12	200 mm	200 mm
250	10	M22	12	M27	12	M30	12	7/8"	12	1"	16	250 mm	----
300	12	M22	12	M27	16	M30	16	7/8"	12	1 1/8"	16	300 mm	----

## 5. MUT 2200

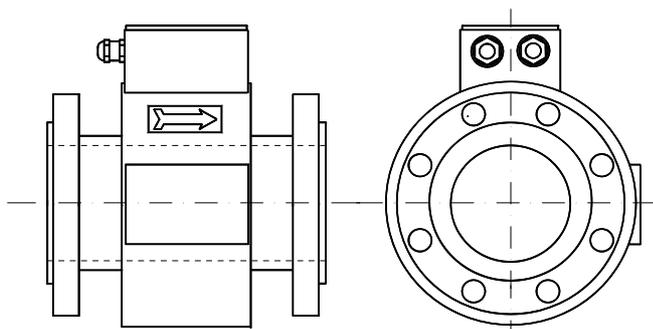

Flanged joints.


Available diameters from DN 25 to DN 400

Lining standard: PTFE (white) (DN 25...150)  
 ebonite for food stuffs (black) (DN 200...400)

Pressure standard: DN 25...50 PN 40;  
 DN 65...150 PN16 = PN10;  
 DN 200... 400 PN16  
 PN 25, PN40, ANSI 150, ANSI 300 on request  
 PN 64 ebonite lining on request.

Body and flanges in stainless steel on request.


**6. MUT 2400**

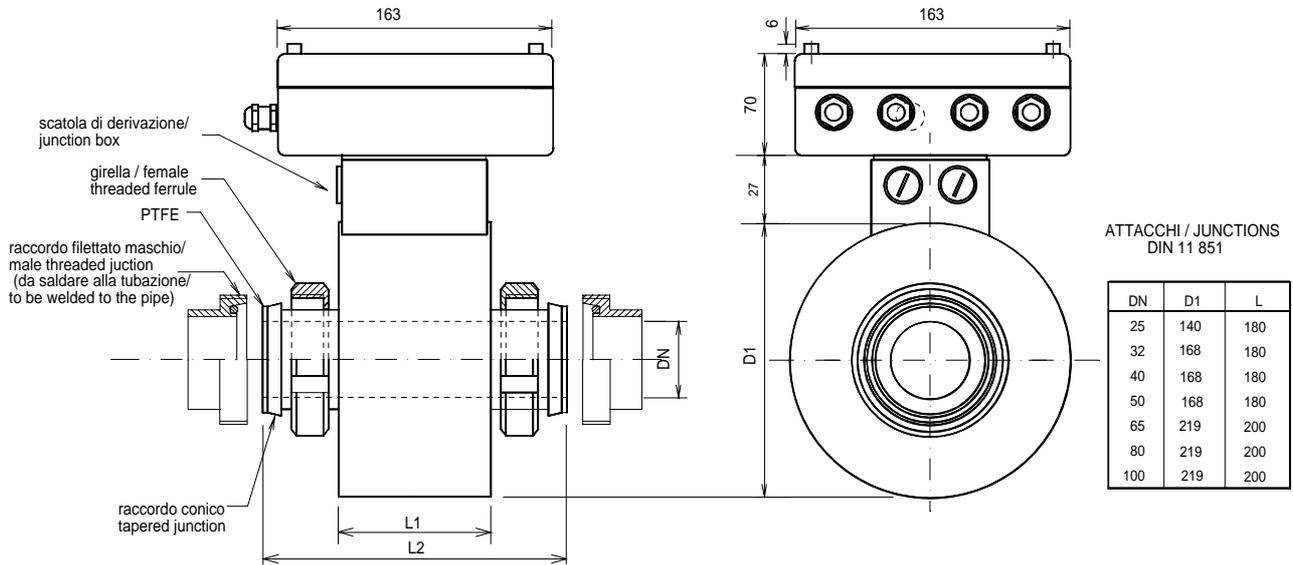

Threaded male joints DIN 11851 or tri-clamp  
 Body in AISI 304.  
 Available diameters from DN 25 to DN 100

Lining standard: PTFE (white)  
 Pressure standard: PN25 DN 25...50  
 PN16 DN 65-80-100


**7. MUT 2500**

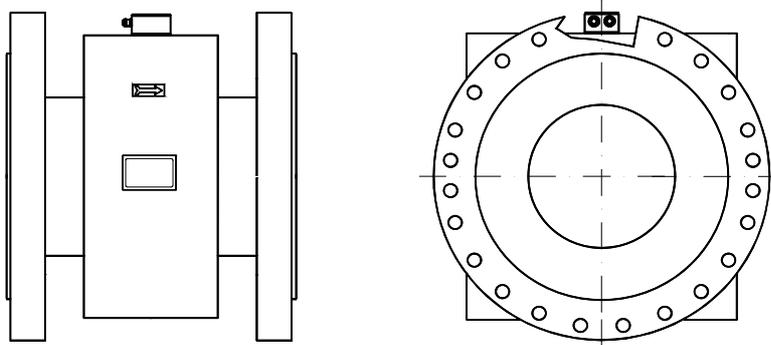


Flanged joints  
 Available diameters from DN 450 to DN 2000  
 Lining standard: ebonite for foodstuffs (black)  
 on request PTFE (white)

Pressure standard: PN16  
 PN 6, 10, 25, PN40, PN 64, ANSI 150 ANSI 300 on request:  
 Body and flanges in stainless steel on request.

**8.1 - SENSOR INSTALLATION**

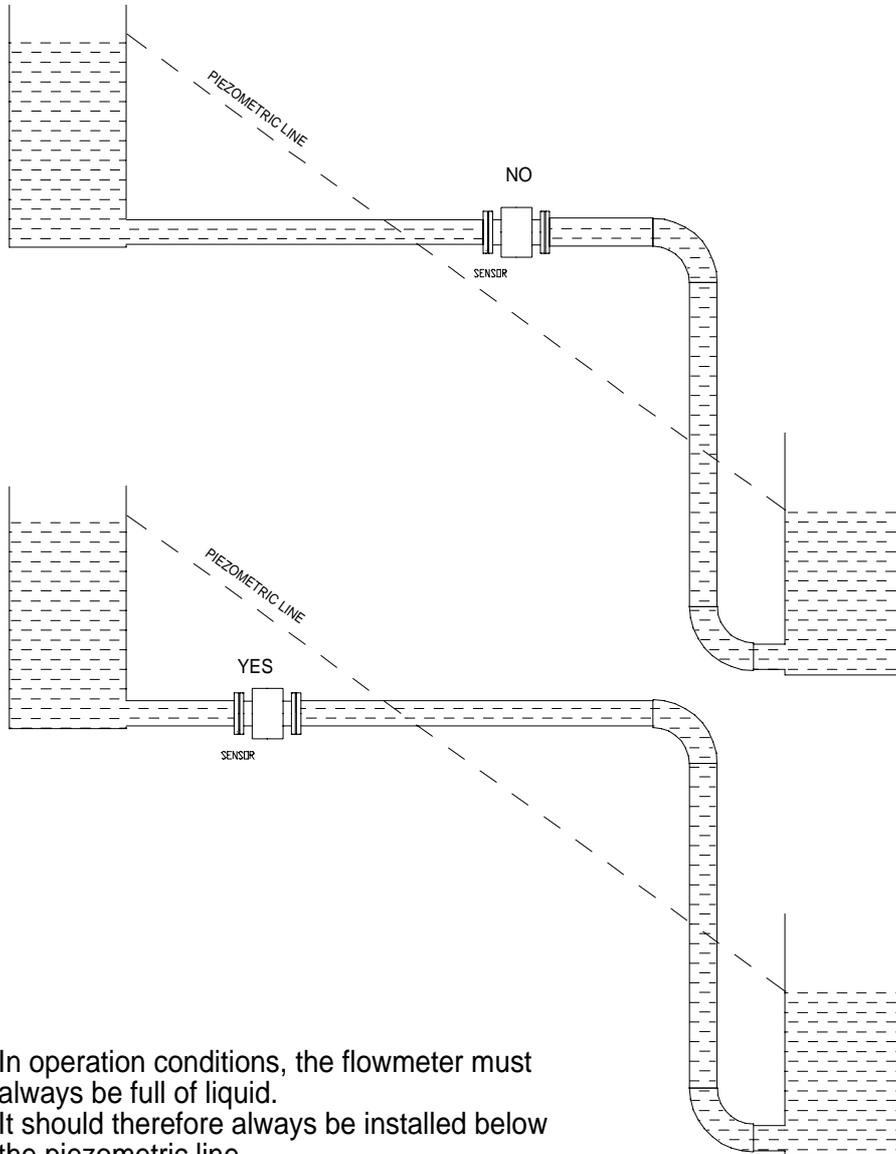

In operation conditions, the flowmeter must always be full of liquid. It should therefore always be installed below the piezometric line.

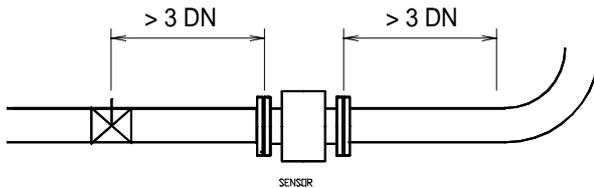

A straight stretch of pipe (without valves, curves, etc.) with a length equal to at least three diameters should be left upstream of the meter

## 8.2 - LIQUID DIRECTION INSIDE THE SENSOR: HOW TO MAKE SENSE OF THE DOUBLE ARROW

If the liquid inside the sensor runs following the arrow direction with the - symbol, then the flowrate is negative and a negative number is displayed.

If the liquid inside the sensor runs following the arrow direction with the + symbol, then the flowrate is positive and a number with no sign is displayed.


reverse flowrate  
minus sign



forward flowrate  
no sign


## 8.3 - OTHER RULES FOR A CORRECT INSTALLATION

ALTO / TOP

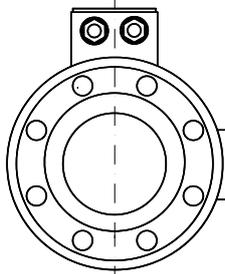


If the meter is mounted on a horizontal pipe, the converte (or junction box) must be mounted above.


FLUSSO / FLOW

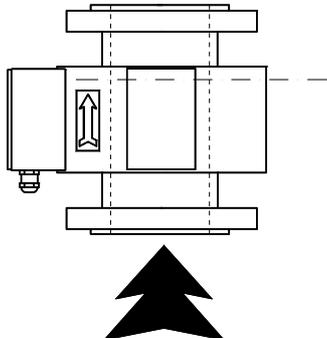

If the meter is mounted on a vertical pipe, the liquid must flow from the bottom up.

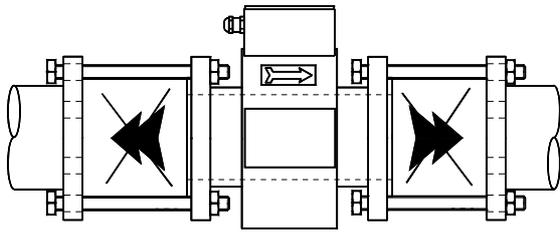




When mounting the meter between pipe counterflanges, do not attempt to bring the two halves of the pipe closer together by tightening the bolts. This would merely damage the meter and invalidate the guarantee.

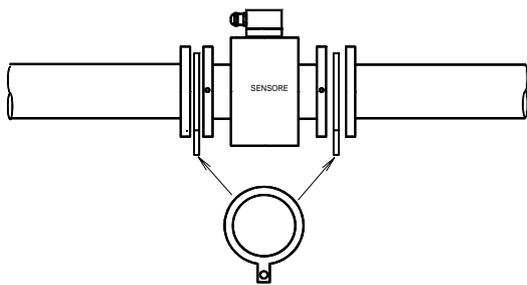


If the pipe is made in insulating material, two metallic earthing rings must be inserted between the meter and the counterflanges.

**8.4 - GROUNDING**

MAKE THE EARTH CONNECTIONS AS SHOWN IN THE FIGURES S1, S2, WITHOUT THESE CONNECTIONS, THE FLOWMETER DOES NOT WORK

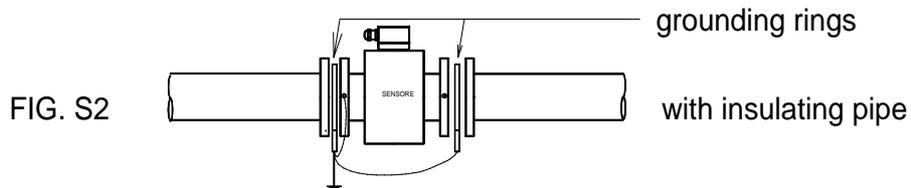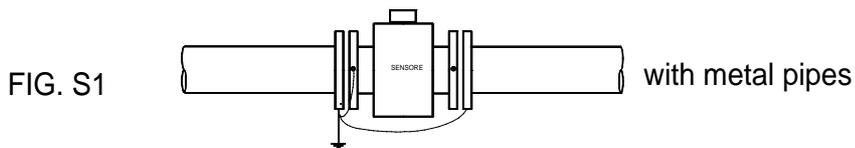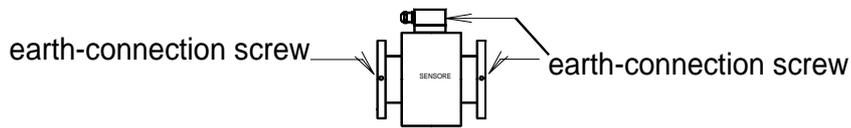

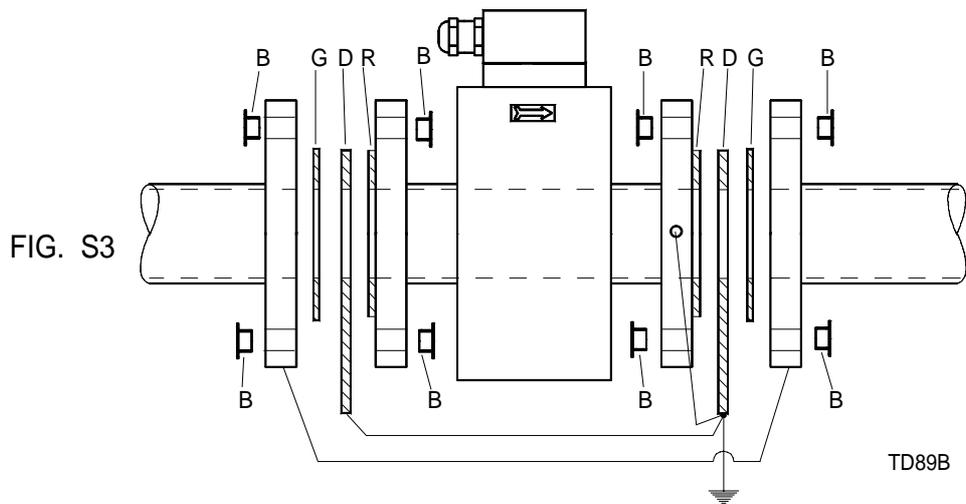

Pipeline with cathode protection  
(see Technical Note TD 053)

- B insulating bushings
- G insulating gasket
- D metal grounding disk
- R sensor insulation lining

The characteristics above listed are standard.  
The characteristics concerning your sensor are shown  
on the data plate that we suggest to read carefully

## 9 - PIPING PRESSURE LESS THAN ATMOSPHERIC PRESSURE:

### SENSORS OPERATING

If the magnetic flow meter is installed on a piping in which the pressure could be smaller than atmospheric pressure (total pressure < 100 kPa = 1000 mbar) it is necessary to check out that the lining is able to resist to these working conditions.

The following table gives/shows the acceptable minimum absolute working pressures under of which there could be some problems in the electrodes tightness.

These minimum values depend, as it is easy to understand, on the diameter, on the lining type and on the liquid temperature.

Table 3: VACUUM RATING in absolute mbar ACCEPTABLE inside the sensors.

DN	MODEL	LINING	20°C 68°F	80°C 176°F	140°C 284°F
3...20	MUT 500	PTFE	0	----	0
3...20	HS 300	PTFE	0	0	0
25...80	MUT 2200	PTFE	0	0	130
25...80	MUT 2400	PTFE	0	250	400
40...80	MUT 1000	PTFE	0	250	130
40...80	MUT 1100	POLIPROP.	0	0	----
100...150	MUT 2200	PTFE	150	250	400
100	MUT 2400	PTFE	250	350	500
100...150	MUT 1000	PTFE	150	250	400
100...150	MUT 1100	POLIPROP.	0	0	----
200	MUT 1000	PTFE	200	300	400
250	MUT 1000	PTFE	300	400	500
300	MUT 1000	PTFE	400	500	600
200	MUT 2200	EBANITE	0	0	----
250	MUT 2200	EBANITE	0	0	----
300	MUT 2200	EBANITE	0	0	----
350	MUT 2200	EBANITE	0	0	----
400	MUT 2200	EBANITE	0	0	----

# **INSERTION FLOWMETER**

## **10 - MUT 2700 - INSERTION MAGNETIC FLOW METER**

This instrument can be installed in pipes with a maximum pressure of 1600 kPa (16 bar).

Installation operations can be performed with the pipe under pressure.

The constructive principle ensures that the sensor is not expelled by the pressure in order to reduce the risk of people injury in the area and fluid leakage of fluid. but this last is not an excuse to avoid to put a big attention for the assembly and disassembly operations.

For this reason, the installation instructions provided below must be scrupulously respected.

The ball valve supplied permits both the installation and the removal of the meter under pressure.

### **10.1 - SUMMARIZED DESCRIPTION OF THE STRUCTURE OF THE MUT 2700**

A 2" GAS coupling to which the ball valve is screwed has been welded onto the pipe.

The "Extremity nut" (B) must be screwed up over the ball valve; the sensor moves inside the ball valve and touch the liquid inside the pipe.

The "insertion nut" (E") coupled with the treated bar (F) allow the insertion of the sensor inside the pipe even if inside this last the pressure is greater than the atmospheric one (always less than 16 bar).

### **10.2 - THE COMPONENT PARTS.**

The component parts of the sensors are:

- Sensor body complete with sliding guide and junction box (separate version) or electronic converter (compact version)
- Insertion Nut (E2)
- Insertion Arms
- 2" ball valve male-female connection
- 2" female sleeve (50 mm length)

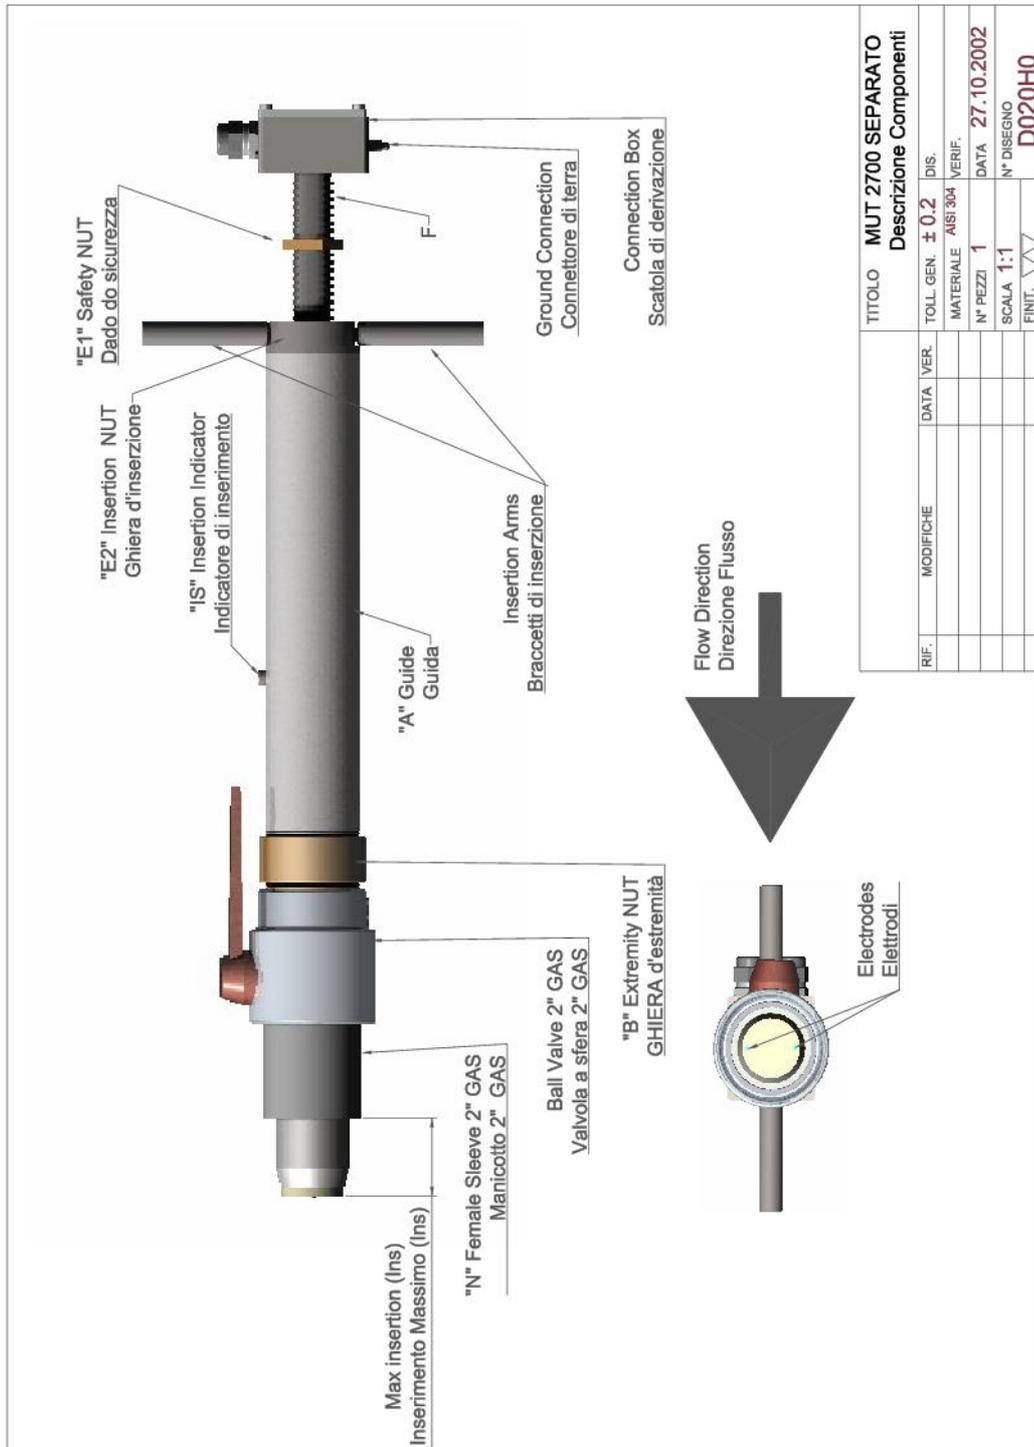


Fig. 10.1

### 10.3 - MUT 2700: ASSEMBLY ON PRESSURIZED PIPES

- 1) Weld the 2" female coupling (N) onto the pipe. The welding seam must be performed only on the outside surface without interruptions and holes. This operation is very important because this g seam must support the liquid pressure.
- 2) Screw the ball valve (V) down tightly onto the coupling and wind Teflon tape around the threading to ensure a perfect seal.
- 3) Drill a hole of at least 49 mm in diameter (centrally aligned in respect to the valve passage hole) in the pipe by introducing a tool that ensures the appropriate seal through the valve.
- 4) Remove the tool while simultaneously closing the valve in order to prevent liquid leakage.
- 5) The correct insertion depth is obtained using the equation written in par. 10.4
- 6) Screw up the insertion arm in their own places over insertion nut (E2)
- 7) Put the safety nut (E1) at the end of the bar in the upper part of the sensor (the nut must touch the bottom part of the connection box or the converter box)
- 8) Put the sensor in sleep position using (E2); the IS indicator must be put in the upper part of the guide (A)
- 9) You must be sure that the PTFE sensor head is placed inside the guide (to avoid that, when opening the ball valve, the electrodes support might be damaged).
- 10) **Keeping the valve closed**, install the meter by tightly screwing<sup>1</sup> (\*) the guide A onto the valve (winding Teflon tape around the threading to ensure a perfect seal). This operation is very important because an error in the screw up of the sensor over the valve should be dangerous (the sensor could be expelled from the valve and could cause damage to people and things).
- 11) Put the sensor in the way that the flow direction is like the picture 10.3
- 12) Open the valve.
- 13) Rotate (E2) by the clockwise
- 14) When the correct position is obtained (par 10.4) you can block (E1) over (E2); this last avoid any movement of the sensor.

Take away the insertion arms

#### NOTE:

---

<sup>1</sup> Do not push over the converter box because it should be broken



#### 10.4 - MUT 2700 THE PENETRATION OF THE SENSOR INSIDE THE PIPE (Fig. 10.2)

The penetration of the sensor inside the pipe must bring the plane of the electrodes to a distance of 1/8 of the pipe's minor diameter from the pipe's internal surface.

This position can be reached by bringing L4 to the following value:

$$L_4 = L_6 - L_1 - S - \frac{D_i}{8} \text{ (mm)}$$

D = internal diameter of the pipe in mm

s = the pipe thickness (in mm)

L6 = the value obtained directly in the plant after installing the sensor (see Fig. 10.2)

L1 = The value is written in Fig. 8.1

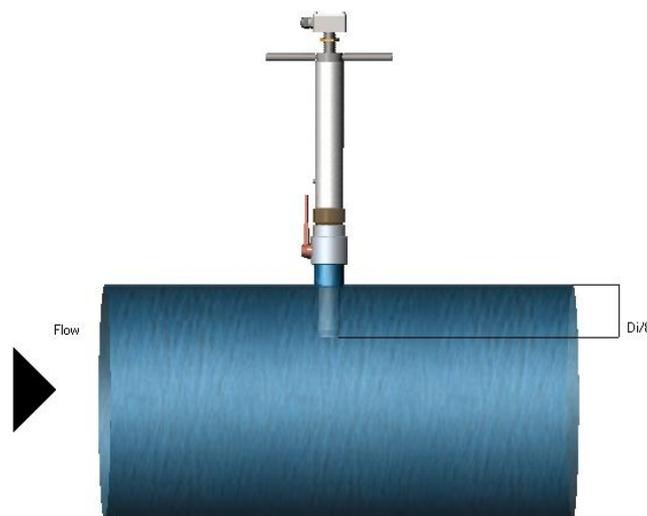


Fig. 10.3

#### 10.5 - MUT 2700 - DISASSEMBLY OF THE METER

- Perform the operations above in inverse order starting from Point 12). Rotate anticlockwise the insertion nut E2 until the insertion indicator "IS" is put in sleep position
- **Close the valve** and unscrew the extremity nut (B) from the ball valve

#### 10.6 - MUT 2700 - GROUNDING THE METER

Connect the flow meter to a good electrical ground potential by using the suitable screw bolt placed on the converter support or connection box .

### 10.7 - MUT 2770 - INSERTION MAGNETIC FLOW METER

- This instrumentation can be installed in pipes with a maximum liquid pressure of 1600 kPa (16 bar).
- For the installation it is necessary that the pipe is empty.
- Make a 49 mm diameter circular hole on the pipe.
- Weld to the pipe hole a flanged coupling with the following features (see Fig. 11.2)
  - a) pipe DN 50 (2") PN 16
  - b) flange UNI 2278 DN 40
  - c) coupling axis must be perpendicular to the piping axis
  - d) flange axis must be at 90° with the piping axis (see Fig. 11.1)

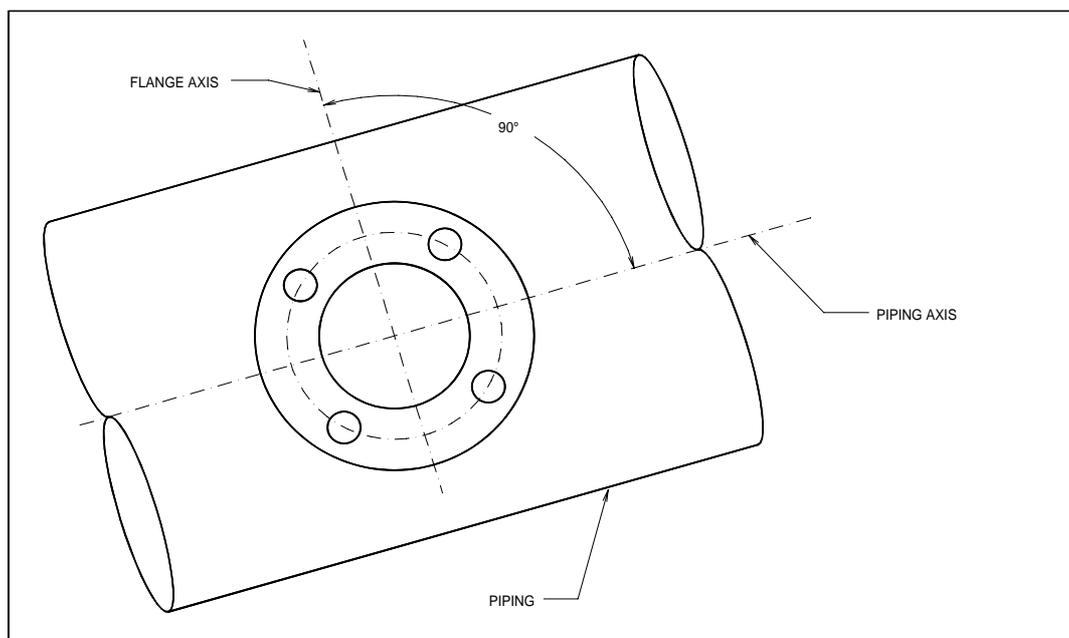


Fig. 11.1

e) respect L10 quote for coupling length. On Fig. 10.2 is explained the meaning and value of L10.

#### **Suggestion for the pipe internal diameter Di measurement:**

1. Measure by a little rope the external piping circumference (in mm)
  2. Divide this measure for 3,14
  3. Subtract from the result the doubled thickness "s" (in mm) of the piping
- The result obtained is the Di value in millimetres.




- Insert the flow meter in the coupling (check the O-RING presence on the flange) so that the straight line passing through the two electrodes is perpendicular to the piping axis.
- Press together the two flanges by four  $\Phi$  16 MA bolts of 60 mm length.
- **Grounding:** connect the sensor to a good ground potential using the appropriate bolt placed on the flow meter flange.

## 10.8 - MUT 2660 – INSERTION FLOWMETER

### GENERAL NEWS

- This instrument can be installed in maximum PN 10 (10 bar) pipes.
- For installing it the pipe must be empty
- Drill a 36 mm hole in the upper part of the pipe
- Weld a treated female sleeve (1”1/4) over the drilled hole
- Screw up the 1”1/4 BSP or NPT fixing device over the female sleeve; it is useful to use the Teflon film for avoiding leakage. When the sensor is put in the correct position (insertion depth = 1/8 Di) and in the correct direction (Fig. 11.1) you can block the blocking nut.

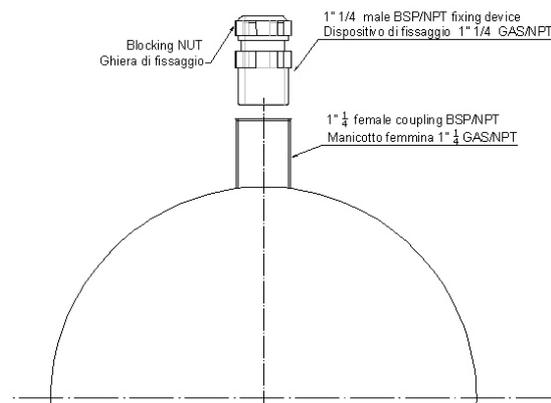

**Fig. 12.1**

The correct position of the sensor is obtained using the below equation:.

$$RL = 310 - s - \frac{1}{8} \cdot Di - L_c$$

Where

s = pipe thickness

Di = internal diameter of the pipe

L<sub>c</sub> = fixing device length (Fig.10.2)

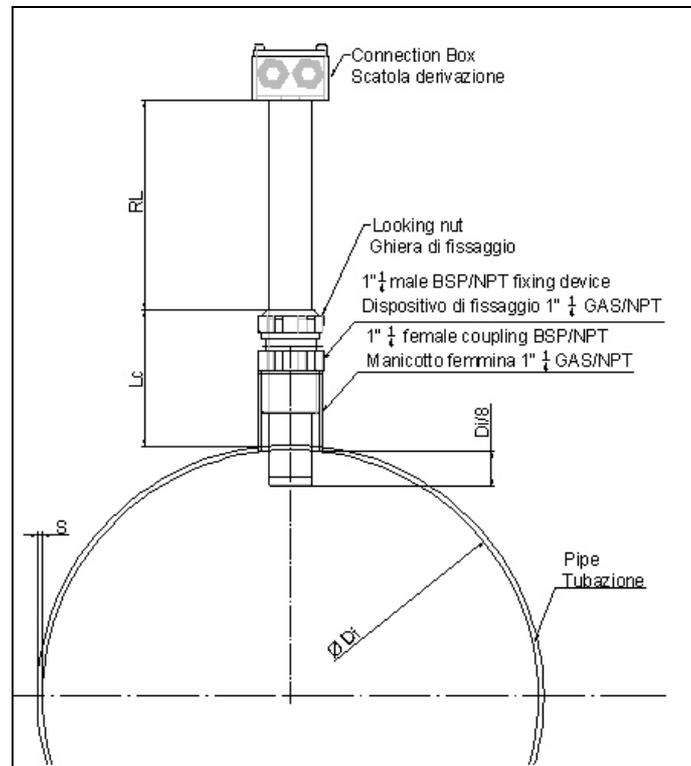


Fig. 12.2

### – Blocking of the sensor

It is important to block the blocking device immediately after controlling the correct position of the sensor in front of flow: the connection box must be positioned parallel to the pipe axis like shown in Fig. 12.3

### **IMPORTANT**

Before starting up the plant you must be sure that the fixing device is really blocked. If you forget this particular operation the pressure inside the pipe could expulse the sensor out of its own place and damage people and things

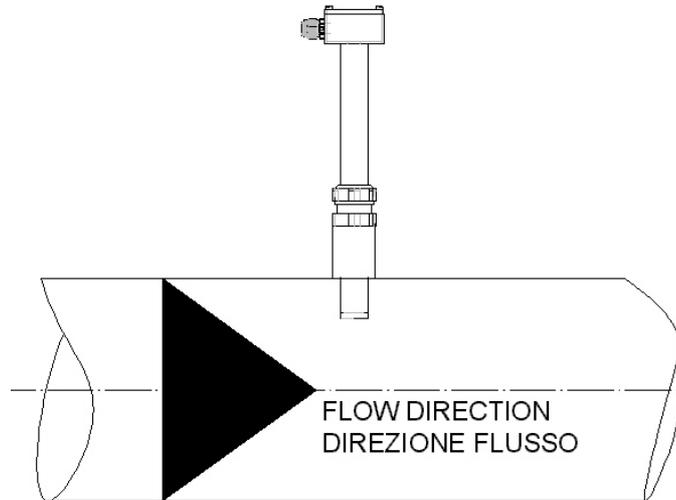


Fig. 10.3

## 11 - INSTALLATION OF INSERTION MAGNETIC FLOW METER

As reminded above the piping must be completely full of liquid, so it is necessary to take the suitable precaution measures in the choice of the sensor location.

The insertion flow meter requires, in addition, to have a straight length piping upstream and downstream without any obstacles. We suggest a length of 10 diameters upstream and 5 diameters downstream.

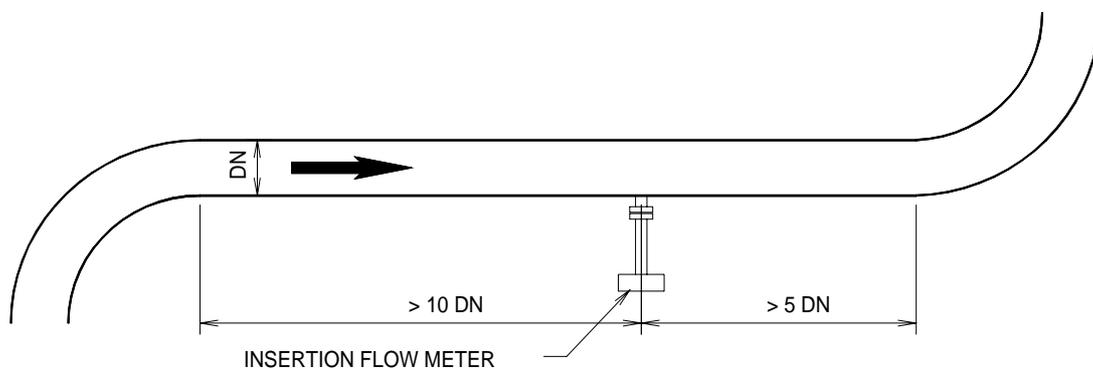


Fig. 13.1

## 11.1 - PIPING PRESSURE LESS THAN ATMOSPHERIC PRESSURE:

### SENSORS OPERATING

If the magnetic flow meter is installed on a piping in which the pressure could be smaller than atmospheric pressure (total pressure < 100 kPa = 1000 mbar) it is necessary to check out that the sensor is able to resist to these working conditions.

The following table gives/shows the acceptable minimum absolute working pressures under of which there could be some problems in the electrodes tightness.

Table 3: VACUUM RATING in absolute mbar ACCEPTABLE inside the sensors

DN	MODEL	LINING	20°C - 68°F -	80°C 176°F	140°C 284°F
----	MUT 2660	----	300	300	----
----	MUT 2700	----	300	300	----
----	MUT 2770	----	300	300	----

## 12 - CONVERTER MC 106

### 12.1 - GENERAL

The converter MC 106 is produced in 3 models:

MC 106 A: it has no keyboard; the display is supplied on request only.

MC 106 B: For panel mounting; equipped with keyboard and display.

MC 106 C: Contained in a stainless steel housing, compact version only, it has no keyboard and no display.

The models MC 106 A and MC 106 C can be programmed by means of the manipulator TRM100 or by terminal TRM200. The MC 106 B that is equipped with keyboard and display is self sufficient for the programming.

### 12.2 - INSTALLATION

The MC 106 A and MC 106 C are delivered, according to the purchase order, in compact version (that is to say they are mounted on the sensor) or separate version.

MC 106 B model, is necessarily always separate, being suitable for panel mounting only.

#### 12.2.1 - MC 106 A - MC 106 C - Compact version

If the flowmeter is installed with horizontal axis the converter should be on the upper part in order to prevent the coverage of the electrode due to possible deposition.

If the flow meter is a insertion type, the cable clamps axis must be perpendicular to the piping axis.

#### 12.2.2 - MC 106 A - MC 106 C - Separate version and MC 106 B

Converter and sensor must be connected by two cables C012 and C013 included in the supply (see below).

##### 12.2.2.a - Coupling

- Read the instrument's rating plate
- Read the number punched in the ACCOP./COUPLING box.
- This is the serial number of the sensor with which this converter must be coupled.
- If no number has been punched into the ACCOP./COUPLING box, the converter can be coupled to any AUTOMAZIONE INDUSTRIALI EUROMAG sensor at all.

**12.2.2.b** - The converter MC 106 A can be installed on the wall or on the target rod. For this reason it comes supplied with four corners suitable for four screws V1  $\Phi$  6 mm (see Fig. 1).

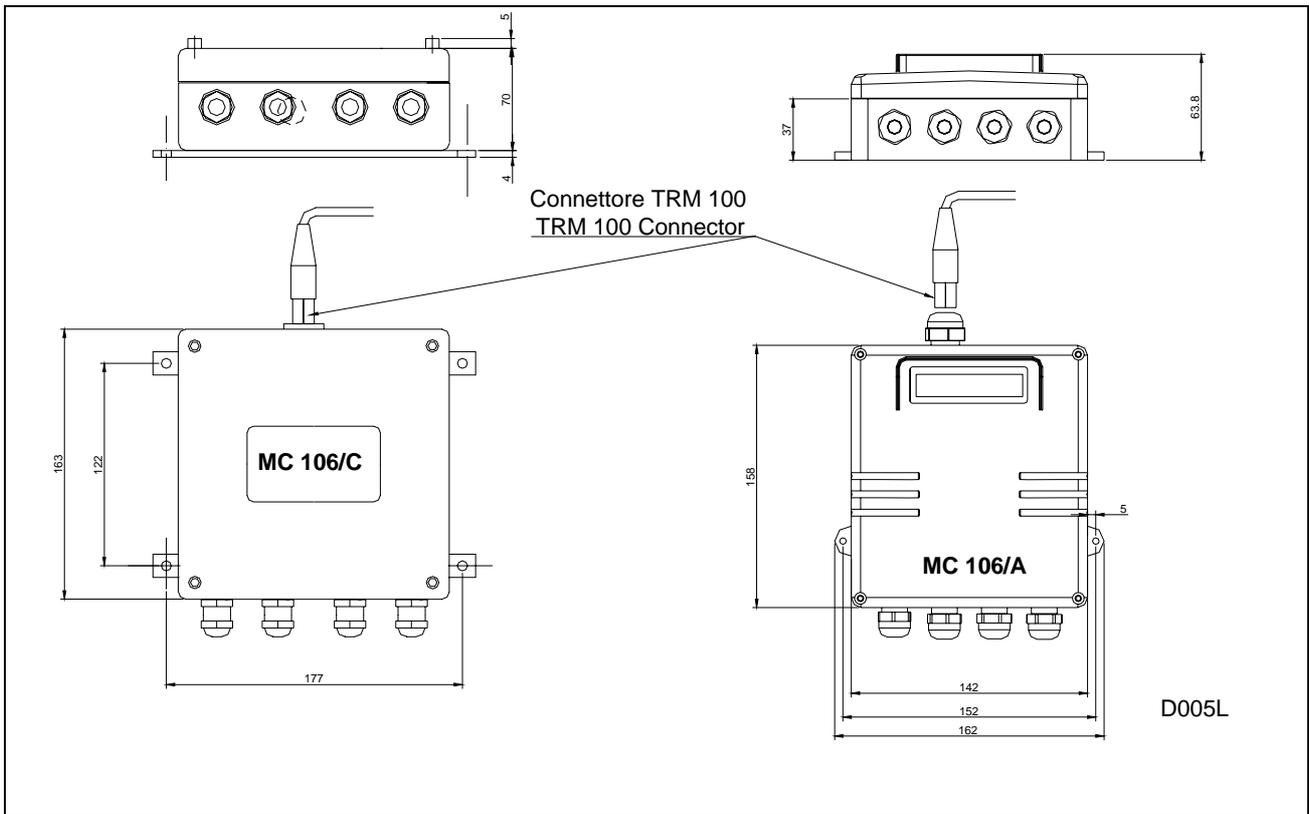


Fig. 1.1: MC 106 A

Fig. 1.2: MC 106 C

12.2.2.c - The installation must provide a suitable space to allow the connection with a TRM 100, if necessary.

12.2.2 d - The model MC 106 B must be horizontal mounted in a panel once opened a hole measuring 135 x 67 mm. The fastening is ensured by two side hooks supplied with the device.

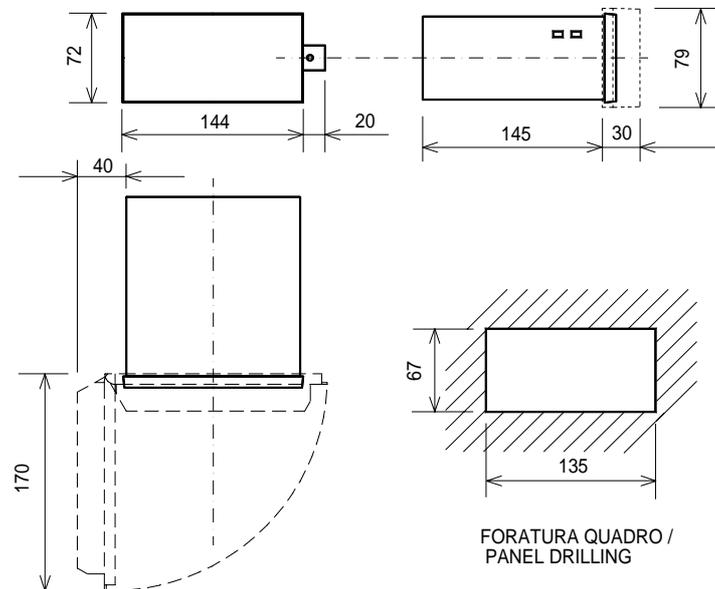


Fig. 2

If the device is fitted with a transparent leaf, the leaf-holder frame must be put on the device before inserting it in the panel. Then the leaf nut be hooked to the frame at, in the end, must be installed the hooks to fix the device to the panel.

**12.3 - ELECTRICAL CONNECTIONS**



**The access to the connection box is allowed to skilled technicians only.**

Fig. 3 shows the connection board of the converter and the function of each terminal.

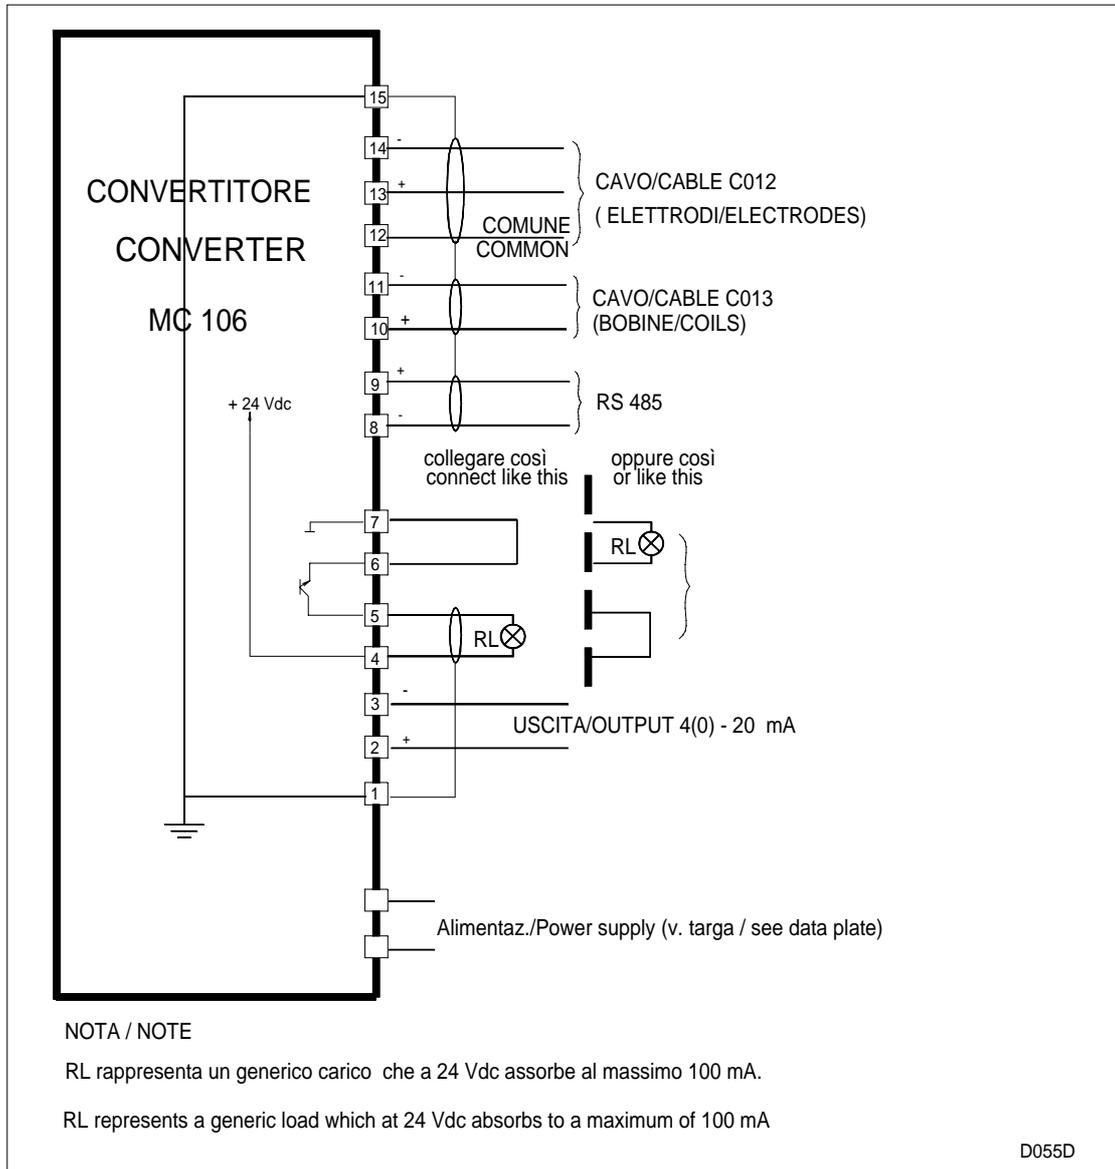


Fig. 3

**12.3.1 - Connection between converter and sensor.**

The connection between converter and sensor is made by the two cables C012 and C013 following carefully the instruction illustrated in fig. 4.

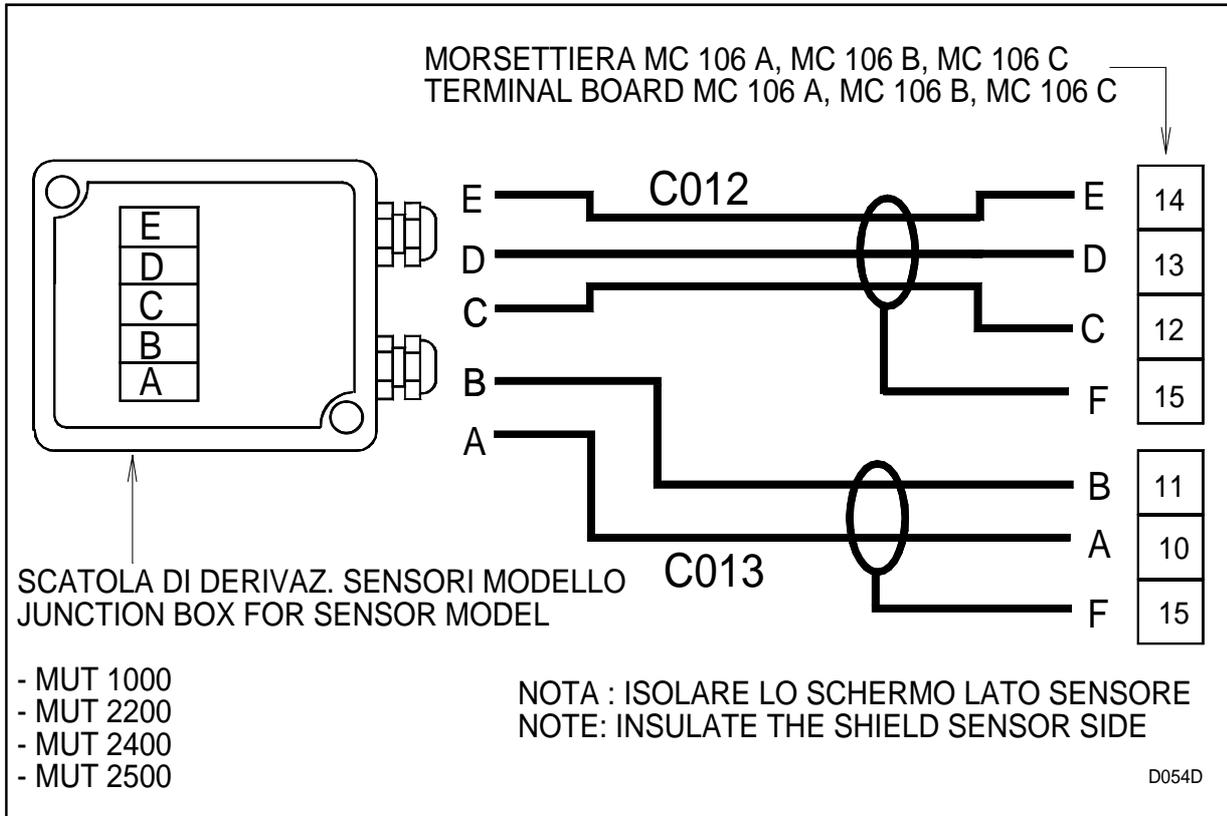


Fig. 4

When the sensor is supplied with cables already connected, their free ends have wires identified by letters and provided with terminals.

**NOTE**

The sensor connection box is suitable to grant a protection degree IP 68 for a permanent immersion of the sensor with a head of water of 4 metres.

It is plain that this result may be really obtained only if, after the the cables connection, the two cable glands and the two screws closing the housing were suitably fastened.

In order to avoid possible faults during these operations, we suggest two possible solutions:

I	II
We can supply the sensor with the cables already connected and with the connection box full of sealing resin .	We can supply a packet of sealing resin SIP1 suitable to fill up the connection box, after a <i>corretct</i> cables connection work.

**12.3.2** - In addition to connection of the cables C012 and C013 as illustrated in fig. 4, the following must also be connected (see fig. 3):

- the ON/OFF output (if used)
- the 4(0) - 20 mA output (if specified in the order)
- the RS 485 serial output (if used)
- the power supply (**last!**)

**12.3.3** - Use a cable terminal for each wire.

### 12.3.4 - ON/OFF OUTPUTS

For all information about the **different uses of ON/OFF output** see paragraph 12.4.9.

If it is used for frequency output, please be aware the maximum obtainable frequency is 1000 Hz.

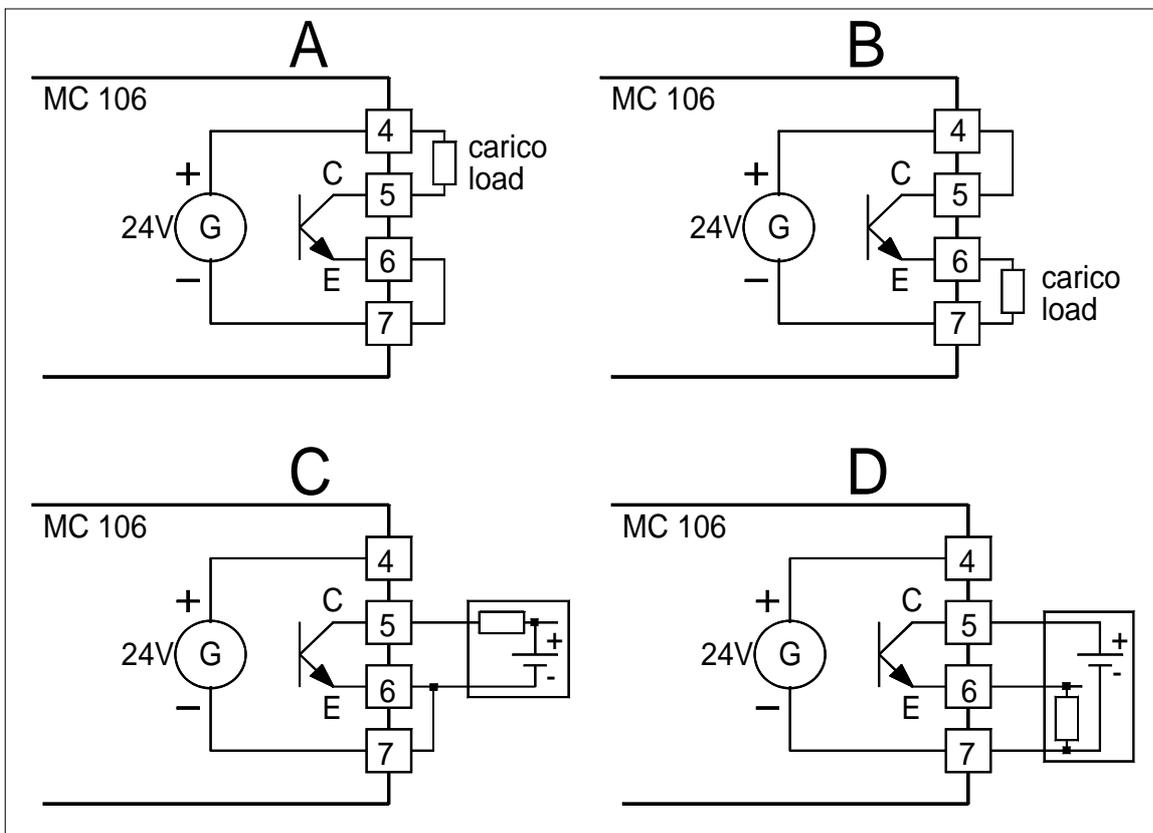


Fig. 5

**12.3.4.1** - If you have to use this output for an impulse counter or an electromechanical pre-selector (24 Vdc) it must be connected between terminals 4 and 5 and terminals 6 and 7 must be interconnected.

**12.3.4.2** - The "load" indicated in diagram A and B may be an electromechanical pulse counter (24 Vdc) or a 24 Vdc relay.

If you have to use an electronic pulse counter or a PLC with a supplied input, you may use one of the diagrams C or D.

**12.3.4.3** - Remember in any case that you can use the TRM 200/2 as impulse counter / pre-setting device and also as a remote terminal (it must be connected to the MC 106 A via the RS 485 serial line, terminals 8-9, and can be installed at over one kilometre away). Its packaging contains all information for connection to the MC 106.

By using TRM 200/2 instead of a normal pulse counter/presetter, you will also be able to reach a higher resolution and, thus, more accurate calculations and batchings.

NOTE. Interface RS485 for MC 106 is not galvanically insulated from outputs. Therefore, it is advisable not to be used in network. For any explanation or more information, please contact our Technical Office.

### **12.3.5 - GROUNDING THE HOUSING OF THE CONVERTER (SEPARATE VERSION)**

The converter housing (MODELS MC 106 A and MC 106 C) must be grounded.

This can be done:

a) by connecting the power supply cable grounding wire, if there is one, to the appropriate terminal on the left (see fig. 6);

or

b) by grounding the proper bolt denoted with the symbol:



In the MC 106 B the grounding wire has to be connected to the appropriate terminal in the near to the power supply terminals.

### **12.3.6 - CONNECTION TO THE ELECTRICAL MAIN**

**(The operation must be performed by skilled technicians only)**



Only after performing all the other connections, you can connect the converter to the main.

On the power supply terminals (Fig. 6) is indicated the voltage:

90 - 264 Vac
-----------------

or

24 V
------

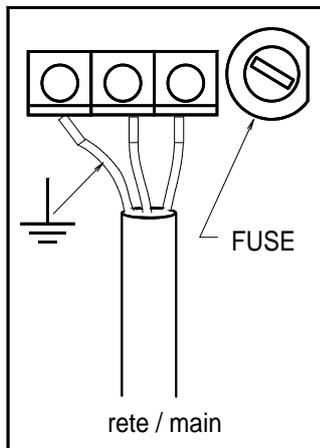


Fig. 6 Power supply

If 90 264 Vac is indicated,  
the device can be fed by voltages from 90 up to 264 V (50...60 Hz)

If 24 V is indicated,  
the device can be fed by

- both alternating voltage from 20,8 up to 27,6 (50...60 Hz)
- or direct voltage from 19 up to 33 V (the polarity is indifferent)



### 12.3.7 - FUSE

(In case of need it must be replaced by skilled technicians only)

The fuse in the MC 106 A and in the MC 106 C is set by side of power supply terminals (see fig. 6).

In the MC 106 B the fuse is set on the electronic board, behind the power supply clamps

The fuse is the 5 x 20 type: 250 V. Its value is:

<b>power supply HV (90...264 Vac)</b>	<b>1 A FAST</b>
<b>power supply LV (24 Vac/dc)</b>	<b>2 A FAST</b>

## 12.4 - PRESETTING OF MC 106 CONVERTER

**12.4.1.1 - MC 106 A - MC 106 C.** These models have no keyboard (the MC 106 A may be equipped with display). So the presetting data must be input in the factory, upon your specifications or, even better, they can be input directly by you using the portable terminal TRM 100 or the remote terminal TRM 200.

In both solutions, the presetting operations are the same.  
The following notes illustrate the presetting procedures.

**12.4.1.2 - MC 106 B.** This model is provided with keyboard and display, therefore you have the possibility to program it by yourself, simply following paragraphs.

### 12.4.2 - USE OF THE KEYBOARD

(E) = ENTER is used:

- \* to confirm data entered
- \* to enable the pre-set mode
- \* to confirm a "critical" selection (totalizer reset, etc.)

(C) = CLEAR is used:

- \* to abandon a function disregarding any modifications made
- \* to display an alarm
- \* to show the type of data on the display
- \* to disable the pre-set mode

(←) and (→) = LEFT and RIGHT are used:

- \* to shift the cursor to the digit to be modified
- \* to change the data display mode on the display

(↑) and (↓) = UP and DOWN are used:

- \* to modify the digit selected by the flashing cursor
- \* to make a choice between the range of choices available
- \* to change the instrument's reading range (if enabled)
- \* to display the date and hour

### 12.4.3 - CHOICE OF THE TYPE OF DATA TO BE DISPLAYED

During normal converter operation, the display shows the measurement data in ways that can be configured by the user. The combinations possible are:

1. Flow rate in measurement units and percentage
2. Flow rate in measurement units and total positive flow rate totalizer
3. Flow rate in measurement units and total negative flow rate totalizer
4. Flow rate in measurement units and partial positive flow rate totalizer
5. Flow rate in measurement units and partial negative flow rate totalizer
6. Positive flow rate total and partial totalizer

7. Negative flow rate total and partial totalizer
8. Positive and negative flow rate partial totalizer

The ← and → arrow keys are used to change the type of data display, and the display will show the selection made.

Press **C** to see all the flow rate or volume data requested.

Press **E** to check the data and to save the setting selections made.

If **C** is pressed while the display is showing flow rate or volume, the current type of data display will be shown.

Press **C** again in order to return to the display of flow rate data.

#### **12.4.4 - ALARM DISPLAY**

The appearance of the ">! <" or "!" symbols signifies that one or more alarm causes are present. By pressing (**C**), the display shows the most important alarm cause among all those detected.

Press (**C**) again in order to see the flow rate or volume data.

#### **12.4.5 - DATE AND TIME DISPLAY**

The current date and hour are displayed by pressing the UP and DOWN keys. Function No. 48 must be used to set the date and time. The internal clock does not have its own batteries and cannot function without electrical power supply. The date and time are "frozen", however, whenever the instrument is switched off, and this provides an indication of how long the instrument has been switched off (for tax-related and other types of verification purposes).

Press (**C**) again in order to see the flow rate or volume data.

#### **12.4.6 - PARAMETER DISPLAY OR MODIFICATION**

Pressing the (**E**) key grants access to parameter display or modification functions. The 5-digit access key must be entered (Function No. 00) in order for data modification to be performed.

Press (**C**) again in order to see the flow rate or volume data.

#### **12.4.7 - THE ENTRY OF A NEW NUMERICAL VALUE**

Whenever a new numerical value must be entered, the display may read as follows, for example:

Line 1: PARAMETER NAME - name of the parameter to be entered

Line 2: UNIT 000.0\_ - unit of measurement and value to be modified

The "\_" symbol indicates the cursor.

At this point, the LEFT and RIGHT arrow keys are used to shift the cursor to the digit to be changed, while the UP and DOWN arrow keys are used to change the digit's value.

When the new numerical value has been set, press either (**E**) to enter the new value or (**C**) to cancel the operation.

### 12.4.8 - THE ENTRY OF OTHER DATA

Non-numerical data, such as the type of output mode: PULSE or FREQUENCY, must also be set on the instrument.

The display will appear as follows when these selections must be made:

Line 1: PARAMETER NAME - name of the parameter to be entered

Line 2: CHOICE X\_ - one of the many selections possible

The "\_\_\_" symbol indicates the cursor.

Use the  $\uparrow$  and  $\downarrow$  arrow keys in order to scan all the choices possible for such parameter. After the desired choice has been made,

press either **E** in order to confirm the choice made,  
or **C** to cancel the operation.

### 12.4.9 - ON/OFF OUTPUT

The converter MC 106 has only one ON/OFF output (terminal 5 collector; terminal 6 emitter). It may be dedicated to just one of the following uses:

	use	how to select	how to enable
1	frequency proportional to flowrate	FUNCTION 14	not enabling any functions 66-29-30-31-32
2	totalizing pulses (2) (3) (4)		
3	forward/reverse flowrate	-----	FUNCTION 66
4	max flowrate alarm	-----	FUNCTION 29
5	min flowrate alarm	-----	FUNCTION 30
6	hardware alarm	-----	FUNCTION 31
7	overflow alarm (5)	-----	FUNCTION 32

- (1) Choice of the frequency range FUNCTION 4.
- (2) Programming of the volume corresponding to 1 pulse: FUNCTION 2.
- (3) Programming of the pulse length: FUNCTION 3.
- (4) Bi-or-uni directional totalization FUNCTION 23.
- (5) The output is ON when the flow exceeds the 100% (or the 110% if functions 20 and 21 are enabled) of the full scale. If the double scale is enabled, (FUNCTION 17) the output is ON **also** when the flowrate is included in the lower scale.

### 12.5 - EXAMPLES OF PROGRAMMING

In order to modify device parameters it is necessary to introduce a access code (see paragraph 12.6). This code enable programming level 1, assigned for most frequently used functions and remain operative for all modifies duration: **it is not necessary, therefore, introducing it for every function to be modified.** The programming level come back to zero after two minutes if other keys on the keyboard are not pressed. When the flow meter goes out from our factory the pre-set code has the following value:

10600
-------



It is possible to modify this code by using function 74 (PERSONAL CODE).

*EXAMPLE 1: Input of access code (in this example: 10600)*

NOTES: The symbol '■' indicates the flashing slider/cursor which appears on the display during data input.  
The sequence of operations described is from left to right and from the top to the bottom.

line	KEY	on the DISPLAY	NOTES
1	[E]	process data (flow rate, volumes, ecc..)	The programming mode is now enabled
2	[E]	ACCESS LEV.0 FUNCTION N.■0	Enable function 00, which permits the introduction of an access code
3	[↑]	ACCESS CODE PASSWORD: ■0000	Increase the first access code figure (in this case 10600)
4	[→]	ACCESS CODE PASSWORD: ■0000	By this key the cursor moves to the second code figure
5	[→]	ACCESS CODE PASSWORD: 1■000	The cursor positions on the third figure
6	[↑] 6 times	ACCESS CODE PASSWORD: 10■00	The third figure increases until reaching number "6"
7	[E]	ACCESS CODE PASSWORD: 10■00	By pressing this key the code is introduced
8		ACCESS LEV.1 FUNCTION N. ■0	Now programming level 1 is enabled and is indicated on the display

Now that programming level 1 is enabled it is possible to pass to the following example.

*EXAMPLE 2: modify of full scale from 5.0000 l/s to 10.000 m<sup>3</sup>/h*

line	KEY	on the DISPLAY	NOTES
9	[→]	ACCESS LEV.1 FUNCTION N. ■0	By this key the cursor moves to the figure closer to the right of the function number
10	[↑]	ACCESS LEV.1 FUNCTION N.0■	By this key the figure closer to the right increases
11	[E]	ACCESS LEV.1 FUNCTION N.0■	Function 01, which permits to modify the full scale, is now enabled
12	[←]	F.S. FLOW RATE l/s ■.0000	The cursor moves over time unity (in this case "s" = seconds)
13	[←]	F.S. FLOW RATE l/■ 18000	The cursor moves over volume unity (in this case "l" = litres)
14	[↑] 4 times	F.S. FLOW RATE ■ / h 18000	In this way volume unity is modified from "l" to "m <sup>3</sup> "
15	[→] 3 times	F.S. FLOW RATE m■ / h 18.000	Bring the cursor over the second figure of flow value
16	[↓] 8 times	F.S. FLOW RATE m <sup>3</sup> / h 1■.000	Modify the second figure from "8" to "0"
17	[E]	F.S. FLOW RATE m <sup>3</sup> / h 1■.000	By this key the modification made is confirmed and the parameter is memorized
18	[C]	ACCESS LEV.1 FUNCTION N. ■1	By this key the modification is finished and process data are displayed again
19		process data (flow rate,	The modification is finished and on the display

	volumes, ecc..)	there are the new process data expressed in the new measurement units
--	-----------------	---

## 12 6 - ACCESS LEVELS AND RESPECTIVE ACCESS CODE KEY

LEVEL 0: Parameter display - no access code required.

LEVEL 1: Primary parameter modification - ACCESS CODE 10600 (can be modified by user)

LEVEL 2: Secondary parameter modification ACCESS CODE 21200 (fixed)

A 5-digit code must be entered in order to obtain access to the various levels. The Level 1 code can be modified by the user; the others are fixed. In order to gain access to a level higher than the first one, the Level 1 code (which is presettable) must be entered, and then the access code for the next higher level can be entered.

The request for access codes can be eliminated by configuring the PERSONAL ACCESS CODE (FUNCTION 74) to a value of 00000. After 2 minutes of keyboard inactivity (in which no keys are pressed), the level of enabling returns to zero.

## 12.7 - CONFIGURATION FUNCTIONS AVAILABLE

NF = NO. OF FUNCTION

L = ACCESS LEVEL

N.F.	L	DISPLAY	NOTES
00	0	ACCESS CODE	Access code for function
01	0	FULL-RANGE FLOW RATE	full scale flow rate and measurement unit selection
02	0	PULSE VOLUME	Totalizer pulse volume and measurement unit
03	0	PULSE DURATION	Totalizer pulse duration
04	0	FREQUENCY RANGE	Frequency field proportional to flow rate
05	0	RESPONSE DELAY	Response delay (time constant)
06	1	ZEROING TOTAL. +	TOTAL DIRECT: Totalizer zero-setting
07	1	ZEROING TOTAL. -	TOTAL INVERSE: Totalizer zero-setting
08	1	PARTIAL + ZERO-SETTING	PARTIAL DIRECT: Totalizer zero-setting
09	1	PARTIAL - ZERO-SETTING	PARTIAL INVERSE: Totalizer zero-setting
10	1	FACTORY PRE-SETTING	Factory default data loading
11	2	NOMINAL DIAMETER	Rated diameter of sensor/of the piping
12	2	COEFFICIENT "A"	Sensor coupling coefficient "A" (field)
13	2	COEFFICIENT "B"	Sensor coupling coefficient "B" (zero)
14	2	OUTPUT SIGNAL TYPE	Digital output signal: pulse/frequency
15	2	DISPLAY FREQUENCY	Display frequency on display
17	2	DUAL RANGE	Dual range measurement range
18	2	RANGE CHANGE	Autorange
19	2	CURRENT RANGE	Current range (0-20 / 4-20 mA)
20	2	CURRENT RANGE EXTENSION	Current field extension (up to 22 mA)
21	2	FREQUENCY RANGE EXTENSION	Frequency field extension (+25%)
23	2	TOTALIZATION MODE	Totalization mode (unidirectional/bi-directional)
24	2	EMPTY TUBE TEST	It points out the absence of liquid in the piping.
25	2	TOTAL + ZERO-SET EXT.	TOTAL DIRECT zero-setting on ext. input
26	2	TOTAL - ZERO-SET EXT.	TOTAL INVERSE zero-setting on ext. input
27	2	PARTIAL + ZERO-SET EXT.	PARTIAL DIRECT zero-setting on ext. input
28	2	PARTIAL - ZERO-SET EXT.	PARTIAL INVERSE zero-setting on ext. input
29	2	MAX. FLOW RATE ALARM	MAX. ALARM AND OUTPUT enabling
30	2	MIN. FLOW RATE ALARM	MIN. ALARM AND OUTPUT enabling
31	2	MISOPERATON ALARM	alarm hardware/empty tube output enabling
32	2	OVERFLOW ALARM	OVERFLOW/SCALE CHANGE ALARM enabling
33	2	TOTALIZER DECIMALS	Number of decimals for totalizer display
34	2	MESSAGE LANGUAGE	Language used for messages
35	2	SELF-CALIBRATION	Automatic calibration enabling interval
37	2	CUT OFF (FLOW SUPPRESSION)	Totalization threshold (CUT-OFF)
38	2	PEAK CUT	Max. flow rate variation threshold (PEAK CUT)
39	2	RESPONSE SPEED	Measurement response speed threshold
40	2	MAX. FLOW RATE ALARM	MAX. alarm threshold
41	2	MIN. FLOW RATE ALARM	MIN. alarm threshold
42	2	ALARM HYSTERESIS	Alarm threshold hysteresis value
43	2	FLOW RATE MEASUREMENT UNIT	Flow rate measurement unit selection
44	2	VOLUME MEASUREMENT UNIT	Volume measurement unit selection
45	2	MALFUNCTION CURRENT VALUE	4-20 mA current value in case of malfunction
46	2	MALFUNCTION CURRENT FREQUENCY	Frequency value in case of malfunction
47	2	AUTOMATIC ZERO-SET CALIB.	Automatic zero-setting calibration
48	2	DATE AND TIME SETTING	Time and date setting

49	2	SAMPLING INTERVAL	Time interval for measurement acquisition and printing
50	2	DATA ACQUISITION	Data acquisition enabling (DATA LOGGER)
51	2	TYPE OF DATA	Selection of type of data to be acquired
52	2	DATA ACQUISITION ZERO-SETTING	Acquired data zero-setting
53	2	XXXXXXXXXXXXXXXXXX	Acquired data display (if present)
62	2	RS485 ADDRESS	RS485 address
63	2	RS485 SPEED	RS485 speed
66	2	FLOW DIRECTION	Activation flow direction output
73	2	EMPTY TUBE AUTOM. REGULATION	Empty pipe signal regulation
74	2	PERSONAL CODE	Personalized access code
75	2	TOTALIZER SHUTDOWN RESET	Totalizer shutdown enabling with RESET on
78	2	THRESHOLD EMPTY TUBE DETECTION	empty tube threshold detection
79	2	SPECIFIC WEIGHT	Specific weight for measurement unit
81	2	FLOW RATE SIMULATION	Flow rate simulation value

**FUNCTION 01: FULL RANGE FLOW RATE**

Minimum access level: 0; 1 to modify

The full range flow rate can be set in the following units:

**Metric**

Volume	Weight
cm3 = 0.001 dm3	g = 0.001 kg
ml = 0.001 dm3	hg = 0.1 kg
dm3 = 1 dm3	kg = 1 Kg
l = 1 dm3	q = 100 Kg
dal = 10 dm3	t = 1000 Kg
hl = 100 dm3	
m3 = 1000 dm3	

**Non-metric**

Volume		weight	
	dm3		kg
in3, cubic inches	1.63871e-2	oz, once	0.028350
oz UK, fl.oz UK	0.02841	lb, libbre	0.45359
oz US, fl.oz US	0.02597	ton, short ton	907.18
pt UK, pints UK	0.5679		
pt US, pints US	0.4731		
qt UK, quarts UK	1.1359		
qt US, quarts US	0.9462		
gal UK, gallons UK	4.545771		
gal US, gallons US	3.785333		
ft3, cubic feet	28.31685		
bbl, std barrel	119.238		
bbl oil, oil barrel	158.984		
yd3, cubic yards	764.555		

The time units possible are: seconds (s), minutes (m), hours (h), and days (d).

The full range flow rate can be set between 4 and 100% of the max. flow rate value (equivalent to a speed of the liquid of 10 meters/second).

If a dual range has been enabled, the low flow rate must be set subsequently.

**FUNCTION 02: TOTALIZATION PULSE VOLUME**

Minimum access level: 0; 1 to modify

The totalization pulse volume can be set in the units of measurement listed above and in a numerical range of from 0.00001 - 99999.9.

The measurement unit used to set the pulse volume will also be used to display the totalizer counts.

**FUNCTION 03: TOTALIZATION PULSE DURATION**

Minimum access level: 0; 1 to modify

The totalization pulse duration can be set as desired in the range of 0.40 and a maximum of 9999.99 milliseconds.

The tolerance value is 0 to -20 microseconds.

The output transistor must be connected to a common emitter with the load on the collector in order to obtain the maximum output frequency.

**FUNCTION 04: FREQUENCY FIELD**

Minimum access level: 0; 1 to modify

Whenever output in frequency has been selected instead of pulse, this function permits the setting of the instrument's full range frequency in a range of between 1.00 and 1000.00 Hertz.

**FUNCTION 05: RESPONSE DELAY**

Minimum access level: 0; 1 to modify

The response delay values permitted (in seconds) are 0.18300.0. This value represents the digital filter's time constant.

**FUNCTION 06, 07, 08, 09: TOTALIZER ZERO-SETTING**

Minimum access level: 1

The following totalizers can be zero-set with the use of these functions:

- \* DIRECT TOTAL FLOW RATE (FUNC. 06)
- \* INVERSE TOTAL FLOW RATE (FUNC. 07)
- \* DIRECT PARTIAL FLOW RATE (FUNC. 08)
- \* INVERSE PARTIAL FLOW RATE (FUNC. 09)

A request for confirmation is made before zero-setting is performed.

**FUNCTION 10: FACTORY PRE-SETTING**

Minimum access level: 1

With this function it is possible to cancel all the modifications introduced on the parameters and to come back to the standard factory presetting.

**FUNCTION 11: SENSOR/PIPING DIAMETER:**

Minimum access level: 2.

This function permits the insertion of the nominal diameter in the sensor (plate data): the range is 1÷3000 mm.

If it is a insertion flow meter (MUT 2700 or MUT 2770), you have to input the value (in mm.) of the actual internal diameter of the piping.

If you input value "0" with the insertion meter, the display shows the liquid velocity measure in m/s.

In this case it is possible to associate a full scale value in m/s to the 20 mA value or to the frequency full scale by the 01 function (full scale).

NOTE. When you input a value of "0" as diameter value, the numbers shown by the totalizers have the meter dimensions, but they are useless.

### **FUNCTION 12: SENSOR COUPLING COEFFICIENT "A"**

Minimum access level: 2

This Function permits the sensor's coupling coefficient "A" (read on the rating plate) to be entered in a range of from  $\pm 0.7500 \div \pm 9.9999$ .

#### **NOTE**

If in the data plate the coefficient is preceded by the sign - select the sign - moving the cursor; if in the data plate the coefficient is preceded by the sign + or there is no sign at all, select the sign + moving the cursor.

### **FUNCTION 13: SENSOR COUPLING COEFFICIENT "B"**

Minimum access level: 2

This Function permits the sensor's coupling coefficient "B" (read on the rating plate) to be entered in a range of from  $000000 \div \pm 999999$ .

#### **NOTE**

If in the data plate the coefficient is preceded by the sign - select the sign - moving the cursor; if in the data plate the coefficient is preceded by the sign + or there is no sign at all, select the sign + moving the cursor.

### **FUNCTION 14: OUTPUT SIGNAL TYPE**

Minimum access level: 2

This Function permits the setting of an output signal that is proportional to either the flow rate (FREQUENCY) or to the metered duration pulses set with Function 3. The choices are:

PULSE or FREQUENCY

### **FUNCTION 15: DISPLAY FREQUENCY**

Minimum access level: 2

This Function permits the setting of the number of readings that can be obtained on the display from 0,1 to 10. This Function affects only the data present on the display and not the real measurements themselves.

### **FUNCTION 17: DUAL READING RANGE**

Minimum access level: 2

When this Function is enabled, two measurement reading ranges can be obtained; one range contains the other. The low range permits the expansion of the output field in order to obtain greater resolution.

Exemple

	<b>Low range</b>	<b>Normal range</b>
Flow	0-1	1-10
rate:	meters/second	meters/second
Current:	4÷20 mA	4÷20 mA

Range valid for Normal range:  $(Q_{max}/12.5) \div Q_{max}$

Range valid for Low range:  $(Q_{max}/25) \div \text{Normal Full-scale}$

The switching between a scale and the other one may be made in 4 different ways; see the next function.

### **FUNCTION 18:RANGE CHANGE**

Minimum access level: 2

If Function 17 has been enabled, Function 18 permits the selection of the way in which the measurement scales are exchanged:

1)	On the FLOW RATE VALUE	if $ Q  > SB$	normal scale
		if $ Q  < SB \times 0.9$	low scale
2)	On the FLOW RATE DIRECTION	if $Q < 0$	low scale
		if $Q \geq 0$	normal scale
3)	From an EXTERNAL INPUT	if the input $\geq 3$ Volts	low range
		if the $< 3$ Volts	normal scale
4)	On the MANUAL CONTROL	UP key	normal scale
		DOWN key	low scale

### **FUNCTION 19:CURRENT FIELD**

Minimum access level: 2

This Function is used to select the current range

\* 4-20 mA

\* 0-20 mA

### **FUNCTION 20:CURRENT FIELD EXTENSION**

Minimum access level: 2

When this Function has been enabled, the current can reach a value of 22 mA (110% of the 0-20 mA range - 112.5% of the 4-20 mA range); otherwise the range is limited to 20 mA (100%).

### **FUNCTION 21:FREQUENCY FIELD EXTENSION**

Minimum access level: 2

When this Function has been enabled, the frequency (if selected with the use of Function 12) can reach a value of 110% of the full-range set; otherwise the range is limited to 100%.

### **FUNCTION 23: TOTALIZATION MODE**

Minimum access level: 2

If Function 12 has been enabled, totalization pulses can be emitted in two different ways:

\* UNIDIRECTIONAL: pulses are emitted only if  $Q > 0$  (only positive flow rate)

\* BI-DIRECTIONAL: pulses are emitted only if  $|Q| > 0$  (positive or negative flow rate)

The internal totalizers make their counts in any case, regardless of the totalization mode selected.

### **FUNCTION 24: EMPTY PIPE TEST**

Minimum access level: 2.

This function permits to enable the "empty pipe" test.

When this test is enabled, in case of empty pipe the current output, if it is present, reaches the value programmed with function 45 and the frequency reaches the value programmed with function 46, the totalization is interrupted and the ON/OFF output, if enabled with function 31, become ON. For more informations see APPENDIX 2, paragraph A2.7.

### **FUNCTION 25, 26, 27, 28: TOTALIZER EXTERNAL ZERO-SETTING**

Minimum access level: 2

These functions enable totalizer reset whenever a suitable signal is received from serial interface RS 485.

- TOTAL DIRECT FLOW RATE (FUNC. 25)
- TOTAL INVERSE FLOW RATE (FUNC. 26)
- PARTIAL DIRECT FLOW RATE (FUNC. 27)
- PARTIAL INVERSE FLOW RATE (FUNC. 28)

### **FUNCTION 29: MAX. FLOW RATE ALARM**

Minimum access level: 2

This Function permits the max. flow rate alarm to be enabled ( $|Q| > \text{max. threshold}$ ) and the appropriate output to be enabled when the respective alarm is operating.

### **FUNCTION 30: MIN. FLOW RATE ALARM**

Minimum access level: 2

This Function permits the min. flow rate alarm to be enabled ( $|Q| < \text{min. threshold}$ ) and the appropriate output to be enabled when the respective alarm is operating.

### **FUNCTION 31: MISOPERATION ALARM and EMPTY TUBE**

Minimum access level: 2

This Function enables the misoperation alarm (hardware alarm) that is active when one or more of the following conditions happens:

ADC MISOPERATION (saturation or others causes)

COILS OR CLABLES INTERRUPTED OR EMPTY TUBE

In these situations the output is OFF. During the normal operation the output is ON.

### **FUNCTION 32:OVERFLOW ALARM**

Minimum access level: 2

This Function permits the overflow alarm to be enabled ( $|Q| > 100\%$  f.s.) and the appropriate output to be enabled when the respective alarm is triggered.

### **FUNCTION 33:TOTALIZER DECIMALS**

Minimum access level: 2

From 0 to 3 decimal figures can be set for totalizer reading. The totalizer value is automatically updated.

### **FUNCTION 34:MESSAGE LANGUAGE**

Minimum access level: 2

This Function permits the choice between 2 different languages.

### **FUNCTION 35:SELF-CALIBRATION**

Minimum access level: 2

This Function permits the instrument's automatic calibration (which cancels the gain and conversion offset error).

This Function requires an execution time that is 3 times as long as the sampling period. There are 4 self-calibration modes:

\* DISABLED

\* EVERY 10 MINUTES

\* EVERY HOUR

\* AT EXTERNAL COMMAND (received from serial interface RS485)

Because a calibration cycle lasts 3 times longer than a normal measurement, we recommend either disabling this Function whenever dosing is performed or using an external command as soon as dosing is begun.

This Function is used whenever the meter is subjected to sudden changes in temperature.

### **FUNCTION 37 CUT OFF (FLOW RATE SUPPRESSION)**

Minimum access level: 2

This Function inhibits the totalization of the flow rate whenever  $|Q| <$  the threshold.

The threshold values are included in the range of 0.0 and 25% of the full scale value.

### **FUNCTION 38 PEAK CUT**

Minimum access level: 2

This Function limits the measurements that differ from one another by a set value greater than the threshold value set, and permits the reduction of any components of disturbance present in the measurement. The values valid range from 0 to 125% of the F.S.

### **FUNCTION 39 RESPONSE SPEED**

Minimum access level: 2

This Function permits the measurement filter to be by-passed (response delay) whenever the variations between the two measurements exceed the threshold value set. The values range from 0 to 125% of the F.S.

### **FUNCTION 40 MAX. FLOW RATE ALARM**

Minimum access level: 2

The alarm threshold value ranges from: 0-125% of the F.S.

### **FUNCTION 41 MIN. FLOW RATE ALARM**

Minimum access level: 2

The alarm threshold value ranges from: 0-125% of the F.S.

### **FUNCTION 42 ALARM HYSTERESIS**

Minimum access level: 2

The alarm hysteresis threshold can be programmed from 0 - 25% of the f.s.

### **FUNCTION 43 FLOW RATE MEASUREMENT UNIT**

Minimum access level: 2

This Function permits the selection of the following 4 different combinations:

- METRIC VOLUME
- METRIC WEIGHT
- NON-METRIC VOLUME (BRITISH OR US SYSTEM)
- NON-METRIC WEIGHT (BRITISH OR US SYSTEM)

The specific weight must be entered for the unit of weight (Function 13).

### **FUNCTION 44 VOLUME MEASUREMENT UNIT**

Minimum access level: 2

This Function permits the selection of the following 4 different combinations:

- METRIC VOLUME
- METRIC WEIGHT
- NON-METRIC VOLUME (BRITISH OR US SYSTEM)
- NON-METRIC WEIGHT (BRITISH OR US SYSTEM)

The specific weight must be entered for the unit of weight (Function 13).

#### **FUNCTION 45 MALFUNCTION CURRENT VALUE**

Minimum access level: 2

Whenever a hardware alarm has been triggered (tube empty, coils interrupted, etc.) the current output goes to the value programmed with this Function.

Values possible: from 0 to 120% at 20 mA

The NAMUR NE42 Recommendations prescribe a value of < 3.6 mA or > 21 mA.

#### **FUNCTION 46 MALFUNCTION CURRENT FREQUENCY**

Minimum access level: 2

Whenever a hardware alarm has been triggered (tube empty, coils interrupted, etc.) the frequency output goes to the value programmed with this Function. Values possible: from 0 to 125% of the scale.

#### **FUNCTION 47 AUTOMATIC ZERO-SET CALIB.**

Minimum access level: 2

This Function is used to perform the system's "AUTOZERO" calibration. Make sure that the liquid is perfectly stationary. The UP key is used to enable calibration. For more informations see APPENDIX 2, paragrapg A2.8.

#### **FUNCTION 48 DATE AND TIME SETTING**

Minimum access level: 2

This Function is used to set the instrument's date and time. These values are "frozen" whenever the instrument's power supply is cut-off. The subsequent difference between the real time and the time indicated on the instrument permits the interval for which the instrument remained without power to be calculated with precision. The time range valid is as follows: from 00:00 01/01/1992 to 23.59 31/12/2087,

The clock is used by the DATA LOGGER and by the system during automatic printing.

#### **FUNCTION 49 SAMPLING INTERVAL**

Minimum access level: 2

This Function permits the setting of the sampling interval in minutes from 1 to 60,000. This interval is used to collect data in the DATA LOGGER or for automatic data printing.

### **FUNCTION 50 DATA ACQUISITION**

Minimum access level: 2

This Function is used to enable data acquisition (in the DATA LOGGER).

### **FUNCTION 51 TYPE OF DATA**

Minimum access level: 2

The operator can choose to collect either flow rate or volume data.

Data acquired will be expressed in the same units by which they are shown on the display at the acquisition moment. One can collect maximum 64 samples of volume or flow rate.

When the operator choose the volume, the maximum volume obtainable in the range set by function 49 is 65535; however if the volume value shown on the display contains decimals, the maximum volume obtainable decreases: for example if there are 3 decimals the maximum volume obtainable is 65,535.

### **FUNCTION 52 DATA ACQUISITION ZERO-SETTING**

Minimum access level: 2

This Function is used to set the data acquired by the DATA LOGGER to zero. A request for confirmation is made before zero-setting is performed.

### **FUNCTION 53 ACQUIRED DATA DISPLAY**

Minimum access level: 2

This Function is used to display the data acquired; they can be read by RS 485.

### **FUNCTION 62 RS485 ADDRESS**

Minimum access level: 2

This Function permits the introduction of the RS485 system address. The values can range from 0 to 31.

### **FUNCTION 63 RS485 SPEED**

Minimum access level: 2

Four different speeds can be selected:

1200 bps

2400 bps

9600 bps

19200 bps

**FUNCTION 66: FLOW DIRECTIONAL OUTPUT**

When this function is enabled, the only available ON/OFF output operates as indicator of the sign of the flow: the output is ON when the flow is NEGATIVE.

**FUNCTION 73: EMPTY PIPE AUTOMATIC REGULATION**

Minimum access level: 2.

This function permits the automatic calibration of the detecting threshold of empty pipe condition. The regulation is performed by filling and emptying the measuring pipe and storing the empty pipe conductivity value.

For more informations see APPENDIX 2, paragraph A2.7.

**FUNCTION 74 PERSONAL CODE**

Minimum access level: 2

This Function is used to modify the programming function ACCESS CODE.

<p style="text-align: center;"><b>IMPORTANT!</b> <b>WRITE DOWN AND</b> <b>JEALOUSLY GUARD THE</b> <b>ACCESS CODE SET</b></p>
--

**FUNCTION 75 TOTALIZER SHUTDOWN RESET**

Minimum access level: 2

This Function is used to enable the shutdown of the totalizers whenever an external RESET signal has been given (by RS 485).

**FUNCTION 78: EMPTY PIPE DETECTING THRESHOLD**

Minimum access level: 2.

This function permits to modify manually the detecting threshold of empty pipe condition. (see APPENDIX 2, paragraph A2.7).

**FUNCTION 79 SPECIFIC WEIGHT**

Minimum access level: 2

This Function permits the entry of the specific weight of the liquid to be measured in kg/dm<sup>3</sup> in a range of 0.0001 - 99.9999. This Function is used whenever a unit of weight is used instead of a unit of volume for the measurement of flow rate or totalization.

Note: specific weight is more or less affected by temperature depending on the type of liquid being measured. The measurement error derived must therefore be assessed with the correct attention.

**FUNCTION 81 FLOW RATE SIMULATION**

Minimum access level: 2

This Function can be used to simulate a flow rate value included in the range of -125.00% and +125.00% F.S. It is useful to verify the correct operating of outputs.

## APPENDIX 1

### TRANSFORMATION OF MC 106 A FROM COMPACT TO SEPARATE VERSION

(January 1th 2000 upgraded)

If you own a magnetic flow meter in compact version and you need to separate the converter from the sensor, you can operate as described here below.

To carry out this operation you must require to your supplier Company the "separate KIT K106 A" and furthermore the couple of cables C012 and C013 necessary to connect the sensor to the converter.

The Kit K106 A includes:

- 1 Basic alluminium housing with 5 cable clamps
- 2 small cover with screws and grounding wire
- 3 5 MA nut + grower
- 4 5 mm hesagonal wrench
- 5 1 resin RES01 packet
- 6 2 whitened brass PG 11 cable clamps

### PROCEDURE

- 1) DISCONNECT ALL THE WIRES FROM THE TERMINAL BOX
- 2) UNSCREW THE FOUR PASSAGE SCREWS OF THE BOARD FROM THE HOUSING (4MA x 10 CHEESE-HEAD SCREWS)
- 3) REMOVE THE BOARD FROM THE HOUSING AND MOUNT IT ON THE NEW ONE
- 4) UNSCREW THE TWO BOARD FIXING SCREWS FROM THE SENSOR TERMINAL BOX (6 MA x 12 CROSS-HEAD SCREW)
- 5) FIX THE CONVERTE TO THE WALL
- 6) CONNECT THE SMALL COVER GROUNDING CABLE TO THE PROPER SCREW PLACED INSIDE THE TERMINAL BOX, FIXING THE THIMBLE BY A 5MA NUTS AND GROVED WASHER
- 7) UNSCREW THE TWO PG 11 SCREW PLUGS PLACED ON THE CONNECTION BOX SIDE AND IN THEIR PLACE SCREW THE TWO PG 11 CABLE CLAMPS SUPPLIED WITH THE KIT
- 8) CONNECT CABLES C012 AND C013 ACCORDING TO WHAT REQUIRED IN THE INSTRUCTION MANUAL

- 9) IF POSSIBLE, VERIFY THE CORRECT OPERATING OF THE FLOW METER
- 10) SEAL THE TERMINAL BOX BY SIP 01 SEALING RESIN, AFTER HAVING CAREFULLY READ THE INSTRUCTIONS WRITTEN ON THE ENVELOPE.

## APPENDIX 2

### THE MEANING - OPERATION - PROGRAMMING METHODS FOR A NUMBER OF FUNCTIONS

#### A2.1 - FUNCTIONS

**05 (response delay),**

**38 (maximum variance),**

**39 (response speed threshold)**


The *measurement* shown on the display and sent to the delivery is the result of a number of operations performed on the signal sampled. The converter samples the signal at regular time intervals known as scanning cycles. At the end of each cycle a new sample is collected that is then compared with the *measurement*. The difference observed (both in absolute value and expressed in % of the full-scale value) is then compared with the value of Function 38 (maximum variance): se if the result is greater than this latter, the value is limited to that of Function 38.

The same difference is then compared with the threshold for Function 39: if it proves to be greater, the *measurement* immediately assumes the value of the new sample, otherwise the value is gradually modified in a period of time adjusted by Function 05 (response delay). This value is to all effects the measurement system's *time constant*.

The evolution of the *measurement* for a variation in flow rate from 0 to 100% caused only by the effect of the response delay is as follows:


TABLE 12.1

FLOW RATE (%)	MEASUREMENT (%)	TIME
0	0	0
100	69	1T
100	89	2T
100	96	3T
100	99	4T
100	100	5T

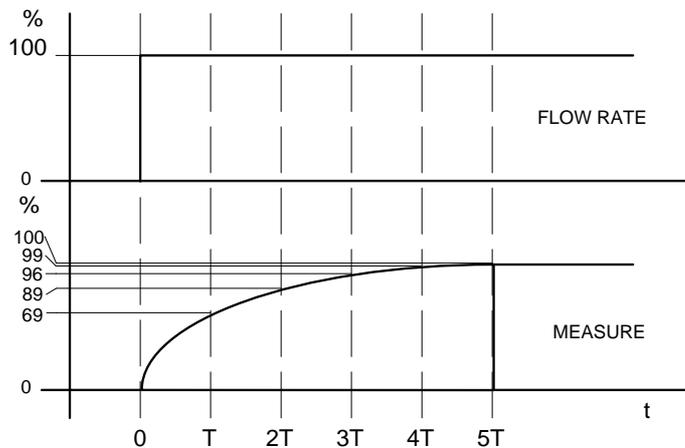

Where T is the value of Function 05.

Let us now suppose that Function 39 is set at 25%; the respective graph will be:

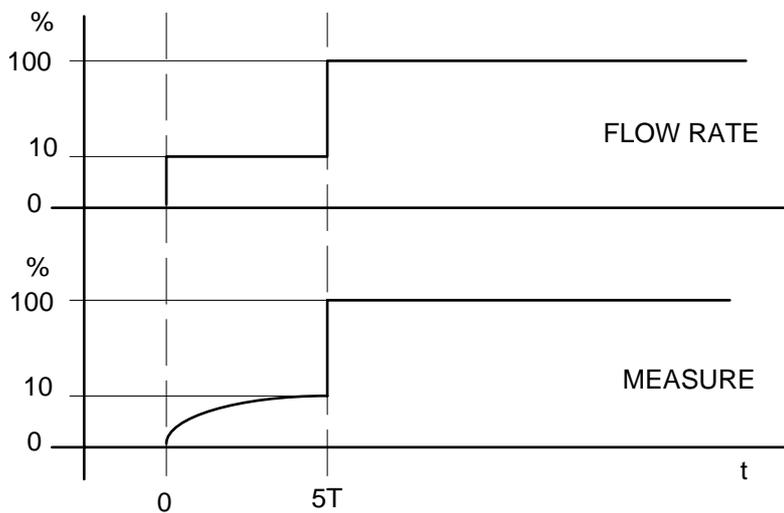

In Point 0 the flow rate varies by 10%. Because the difference is less than 25%, the measurement will be developed by taking account of the response delay and reach 10% after 5 time constants. In the subsequent point, the flow rate varies by 90%: in this case the difference is greater than 25% and therefore the measurement will immediately assume the value of the flow rate.

In summary:

The MAXIMUM VARIANCE (FUNC.38) is useful in order to *limit* momentary peaks in flow rate caused by elements of disturbance: variances greater than the parameter set will be ignored by the flowmeter. Note that the range considered valid for this parameter runs from 0 to 125%, but when the value is set to 0, the flowmeter "freezes" the flow rate value that it measures in that precise instant and does not allow it to vary further. The "standard" value is 100%.

The RESPONSE SPEED THRESHOLD (FUNC.39) is useful to *accelerate* the response supplied by the flowmeter to *greater variances* in flow rate, such as those that occur during the opening or

closing of valves, the starting or stopping of pumps, etc. By setting this threshold to zero, an extremely "quick" but equally "turbulent" measurements can be obtained. The "standard" value here is' 10%.

The RESPONSE DELAY (FUNC.05) is useful to *lower slight variations* in the flow rate in order to permit stable and precise measurements to be obtained. The value recommended runs from 2 to 10 seconds depending on the diameter.

Significant results in terms of measurement stability and speed and invulnerability to hydraulic turbulence can be achieved by setting these functions appropriately during the installation of the flowmeter.

## A2.2 - FUNCTION 10 (FACTORY PRE-SETTING)

The pre-setting data are stored in non-volatile memory, and there are two copies of the data: a *working* copy and a *safety* copy. When the flowmeter leaves the factory, the working and safety data are automatically pre-set at "standard" values and are both identical. When the instrument's configuration parameters are changed, only the working data are modified. Function 10 copies all the safety data (pre-set in factory) over the working data, thereby **CANCELLING ANY MODIFICATIONS MADE**.


NOTE: The "standard" values are those that ensure the instrument's operation in the vast majority of cases. Whenever converters already coupled to the respective sensors are requested (the most frequent case), the "standard" parameters are completed with the sensors' setting coefficients. The resumption of the data through the use of Function 10 is the fastest and most reliable solution whenever the instrument's configuration data have been subjected to tampering.

## A2.3.- FUNCTION 14 (OUTPUT SIGNAL TYPE)

The flowmeter can generate pulse-type signals in either of the two different ways selected through the use of Function 14:

1. PULSE: Function 02 (pulse volume) defines the volume of liquid as represented by a pulse (unit volume). Whenever a unit volume passes through the flowmeter, a pulse is generated. At equivalent flow rates, the time interval between one pulse and the next cannot be constant for the following reason:

The converter calculates the volume of liquid that has passed through the sensor at equal and repeated intervals of time, or rather, at every *scanning cycle*. For this reason, the volume calculated case by case regards a given *scanning cycle*. This quantity is compared with the unit volume in order to determine the number of pulses to be emitted. These pulses are emitted during the following cycle. The ON time is equal to the OFF time and this time can be modified by Function 03. The diagram below is the result.

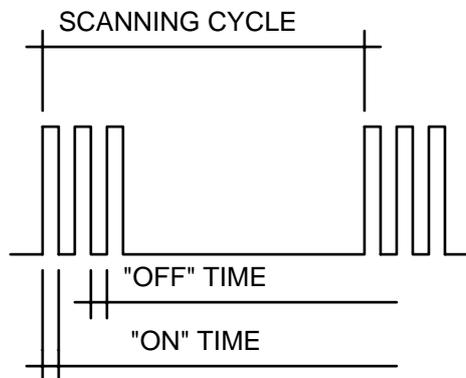

From this we can infer that these pulses are generated in the form of "packets" at each scanning cycle.

In other words, these pulses represent a volume that has already *passed* through the flowmeter and are therefore emitted with a delay and for this reason are not distributed along the entire scanning cycle but grouped for the purpose of being acquired in the shortest time possible.

Whenever the pulses are so numerous that they cover the entire scanning cycle, the *maximum* output *frequency* is reached, or in other words, the maximum number of pulses that can be generated by the instrument *in one second*. If the flow rate were to increase even more after reaching this condition, or if the unit volume were to decrease, the phenomenon of *saturation* would occur, and under such conditions the instrument would be incapable of emitting a sufficient number of impulses and thus begins accumulating those in excess in the memory circuit. When saturation no longer occurs, the pulses that have been accumulated are emitted at the highest frequency possible. This lessens the risk of losing pulses when the flow rate exceeds the working conditions foreseen.

The internal memory has a maximum capacity of approx. 32000 pulses, and for this reason if saturation endures for a long time the risk arises that this number will be exceeded, with the consequent loss of pulses.

In order to avoid saturation during maximum flow rate conditions, the duration and the volume of the pulse must be accurately sized. The most rapid method is the following:

### The minimum duration of the pulse possible compatible with the instrument that must receive it is selected and this value is set with the use of Function 03;

### With the use of Function 01, the full-scale foreseen and expressed in *liters per second* (l/s), this unit of measure can be applied with all diameters from 3 to 2000 mm;


### Multiply [the value of Function 01] by [the value of Function 03] / 500: this is the smallest volume *in liters* that can be given to the pulse in order to avoid saturation at the maximum presumed flow rate (full-scale);

### With the use of Function 02, set the volume of the pulse *in liters* to a value no lower than the calculated value;

### At this point, the units of measure can be changed (but not the values) for Functions 01 and 02 as desired: the converter will make all the necessary changes automatically.

2. FREQUENCY: The Function 04 permits a frequency value to be associated with the flow rate full scale, so that in this way a frequency proportional to the flow rate measured can be obtained.

The signal generated is symmetrical square wave (duty cycle = 50%) whose frequency is revised after each scanning cycle as may be inferred from the following diagram:

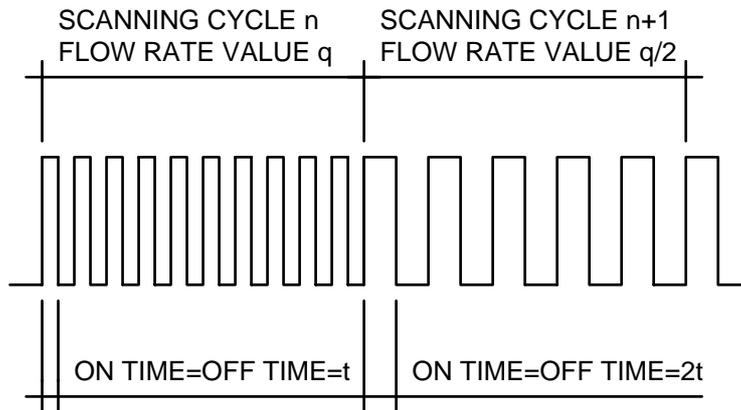

The minimum frequency that can be generated is 0.5 Hz; the maximum is 12500 Hz (MC 108, HS 300) or 1250 Hz (MC 106).

If Function 21 has been enabled (frequency range extension) the frequency can be extended to a maximum of 110% of the full-scale, otherwise it stops at 100%.

The frequency output is used when the flow rate must be transmitted by remote-control, but can also be used for totalization after setting the full-scale value accordingly.

Example: flow rate full-scale = 50 l/s  
 frequency full-scale = 50 Hz  
 in this case, one pulse is equivalent to one liter.

**The use of frequency for totalization is not recommended for mechanical pulse counters that are incapable of withstanding the energization of the coil for an indefinite period: at very low frequencies the output could remain active long enough to burn out the coil. coil.**

TABLE 12.2: The two "methods" compared

FREQUENCY	PULSE
pulses distributed over time	"packet"-type pulses
variable pulse duration	constant pulse duration
pulses phased with measurement	pulses delayed after measurement
loss of pulses if $Q > f.s.$	no loss of pulses if $Q > f.s.$
less precision	maximum precision
can be used only with electronic counters	can be used with any type of counters

**A2.4 - FUNCTIONS 17 (DUAL RANGE)  
 18 (AUTORANGING)**

Flowmeters work internally with extremely high resolution and a much higher measurement range than strictly required for the processing of flow rate values. This extra quality serves a dual purpose:

1. The selection of the full-scale value is simplified to a purely mathematical calculation and there are no changes in the flowmeter's characteristics.

2 Regardless of whatever full-scale value has been set, the flowmeter is always capable of making the calculations correctly, and processing the alarms and emitting pulses even with flow rates 50 times greater than the smallest full-scale value.

This must be recognized in order to explain that the full scale value set on the instrument is pertinent to only the following functions:

- the indication of the flow rate in %;
- the 0/4..20 mA output;
- the frequency output;
- the processing of the alarms and thresholds expressed in % of the f.s.

If, for example, a flowmeter is destined for use only as **a mere counter, the pre-setting of the full scale is not indispensable.**

In other cases, the selection of the instrument's full scale is essential: the range in which it can distribute the signal processed (in either frequency or current) has a modest degree of resolution, poor dynamics, and elevated error margins. All this only goes to show how important it is to center the instrument's full scale carefully. Lastly, some applications (particularly critical adjustment loops, recording systems, etc.) are greatly facilitated by being able to select one of two measurement scales according to the type of process being monitored.

Function 17 permits the enabling of a double range of measurement (dual range) that is contained "within" the normal range. This system permits the expansion of the field of output in order to provide greater resolution.

When Function 17 is enabled, Function 01 is used to set the two f.s values on the:  
normal range  
low range ("contained" in the above).

Function 18 (autoranging) is used to decide when the low range must be used:

- FLOW RATE VALUE: enabled when the flow rate falls below 90% of the low range.
- FLOW RATE SIGN: enabled when the flow rate is negative.
- EXTERNAL CONTROL: enabled when the appropriate control is received on the serial line.
- MANUAL CONTROL: the [↑] key is used to select the normal range, and the [↓] key to select the low range.

If the user wants the instrument to indicate which range is being used, the following Function must be enabled:

FUNCTION 32, out-of-range alarm

This alarm is generated when the flow rate exceeds the normal range's full scale or whenever the pulse frequency is too high, but if enabled it also signals when the instrument is working with the low range.

This is why it is important to be careful during the pre-setting of the normal range's full-scale (the larger of the dual range system) and the duration/frequency of the pulses: if an out-of-range value is given, the signal could be interpreted as indicating "low range enabled".

### **A2.5 - FUNCTIONS 20 and 21 (frequency and current range extension)**

These Functions can be used to extend the current or frequency range full scale up to 110%. When the current range full scale value is extended (Function 20 enabled) the current can reach a maximum of 22 mA, and then overflow indication will be provided above 110% for the 0..20 mA range and above 112,5% for the 4..20 mA range. If the range full scale is not extended, overflow indication will be provided above 100%.

When the frequency range full scale is extended (FUNCTION 21 enabled) the frequency can reach a maximum of 110% of the full scale value set, above which value overflow indication will be provided. This extension can be performed when the output signal is a frequency that is proportional to the flow rate and not the totalization pulses.

The extension of these ranges is very useful in investigating overflow conditions, otherwise, an indication that the flow rate is really at 100% of the f.s. or even well beyond could be provided. The effective use of extended ranges depends on the capacity of the receiving instrument to process such information.

### **A.2.6 - FUNCTIONS 45 and 46 (MALFUNCTION CURRENT/FREQUENCY VALUE)**

FUNCTION 45 is used to set the current value at which the output signal will be sent when one or any of the following conditions occurs:

- empty tube
- interrupted coils
- ADC error

The range valid runs from 0 to 120% of the 0..20 mA scale, with 120% corresponding to 24 mA. This current value does not depend on the extension of the current range selected with the use of Function 20.

NAMUR NE43 Standards prescribe a malfunction signal current of less than 3.6 mA (<18%) or greater than 21 mA (>105%). It would be better to set Function 45 to 10%, this would bring the current to 2 mA in case of the a.m. malfunctions and permit the diagnostics listed below:

- $\text{current} < 2 \text{ mA} - 5\%$ : line interrupted, mains power failure or converter broken;
- $2 \text{ mA} - 5\% \leq \text{current} \leq 2 \text{ mA} + 5\%$ : hardware alarm condition;
- $4 \text{ mA} \leq \text{current} \leq 20 \text{ mA}$ : normal measurement range;
- $20 \text{ mA} < \text{current} \leq 22 \text{ mA}$ : overflow, measurement over 100% of f.s.

Obviously enough, the malfunction signal currents must not be set at values contained within the normal range of measurement.

In the same way, FUNCTION 46 is used to set the value of the output frequency transmitted whenever one or more of the a.m. causes occurs. This Function is enabled only if FUNCTION 14 has been used to enable frequency, rather than pulse output.

The range valid runs from 0 to 125% of the frequency f.s. set, and does not depend on whether the extension of the frequency field has been enabled by the use of FUNCTION 21 or not.

Although no specific regulations exist, the malfunction signal should always be used in the following way:

- $0 \text{ Hz} \leq \text{frequency} \leq 100\% \text{ f.s.}$ : normal measurement range;
- $100\% \text{ f.s.} < \text{frequency} \leq 110\% \text{ f.s.}$ : overflow, measurements above 100% of the f.s.;
- $115\% \text{ f.s.} \leq \text{frequency} \leq 125\% \text{ f.s.}$ : hardware alarm condition.

## A2.7 - "EMPTY PIPE" CIRCUIT FUNCTIONS

MC 106 converter is able to recognize if there is or not some liquid in the sensor.

In order to performing this control a impulsive signal put inside electrodes circuit is generated.

This impulse produces a voltage proportional to the resistance mesured by the electrodes. When the pipe empties the electrodes resistance increases, when it is full it decreases. The difference between the two values of resistance, and therefore voltage, allows to recognize the empty pipe condition.

This method, however, might be not surely unfailing for the following reasons:

- the test impulse has a short lenght of time for not disturbing the measurement and may be considerably reduced by the cable C012/13 capacity; this may produce a weak signal;
- liquids conductivity is considerably variable and when it is weak the signal is noisy and unstable;
- sensor may have internal encrustations keeping a light liquid layer leading to wrong resistance reading.

Conditions for the best "empty pipe" system operation are:

1. sensor lined in PTFE
2. corverter in compact version
3. high liquid conductivity

Fuctions permitting "empty pipe" circuit operation are the following:

funcio n	description	notes
24	empty pipe test enabling	enable this function if there the necessity of using the empty pipe information
73	automatic control of empty pipe identification parameters	to calibrate the required parameters it is firstable necessary to fill up the pipe (for wetting lining and electrodes) and then to empty it and enable the function. The converter performs a series of tests to calculate the optimal/optimum parameters. In the case it should not possible to empty or fill the sensor up with liquid, proceede as written here below; in any case DO NOT ENABLE THIS FUNCION BEFORE HAVING ENABLED FUNCTION 24.

CASE A, the flow meter can not be filled up:

1. enable function 73
2. work on function 78 as next explained for adjusting threshold in the case there should be any working problems;

CASE B, the flow meter is full and can not be emptied out:

- if the version of flow meter is compact or separate and sensor's terminal box is sealed, disconnect wires from connections 1 and 2 of converter;
- if the version of flow meter is separate and sensor's terminal box is not sealed, disconnect C012 cable's wires from E and D<sup>2</sup> connections, being careful that wires do not touch anything, also hands;
- enable function 73;
- reconnect wires to connections, wait some minutes to stabilize measurement: the flow meter must indicate full pipe, otherwise work on function 78 threshold as described ahead.

Table 2.4

function	description	notes
78	empty pipe detecting threshold	this parameter is obtained automatically from function 73 during parameters calibration. It is possible to change/modify it being aware that to a higher number corresponds a lower sensitivity, that is to say that the empty pipe condition is recognized less easily. On the contrary, low threshold values may create wrong empty pipe indications.

## A2.8 - FUNCTION 47 - AUTOMATIC ZERO-SET CALIBRATION

Our converter measurement system ensures high zero stability. In certain cases however it might be necessary to re-calibrate the flowmeter's zero-setting system. This need might be required in the following cases, for example:

- transformation of the flowmeter from compact to separate version and vice-versa;
- periods of long inactivity in which the sensor remains "dry";
- the installation of the sensor in the proximity of strong magnetic fields.

In order to perform this calibration, the operator must be absolutely SURE that the liquid is PERFECTLY stationary, and it is also a good rule to check the sealing of the valves, cocks and all the other hydraulic circuit components for the same purpose, bearing in mind that the instrument is sensitive to liquid speeds of even as low as 0.1 *millimeters/second*.

This calibration is performed by enabling Function 47 by pressing the [↑] key.

In order to annul the calibration performed, the [↓] key must be pressed.

By exiting the Function with [E] all the parameters calibrated are saved;  
with [C] the entire operation is annulled.

<sup>2</sup> Terminals E1 and E2 in the old sensors.

Note that this Function does not automatically return to normal operation after the usual two minutes.

### **A2.9 - FUNCTION 81 - FLOW RATE SIMULATION**

This Function is used when (4..20mA, pulse-type, frequency-type, alarm, etc.) output signals must be obtained and no liquid can be passed into the measurement tube.

A flow rate value from -125 to +125% of the f.s. can be set, zero included.

The effect obtained on the outputs is the same that would be obtained by passing liquid into the flowmeter.

This Function can be very useful during diagnostics in order to check the satisfactory operation of the outputs with reliability.

Note that this Function does not automatically return to normal operation after the usual two minutes.

### APPENDIX 3

#### ERROR OR ALARM MESSAGES VISUALIZED ON THE MC106'S DISPLAY

*The following messages are displayed after the [C] key depression when the symbols ">!<" or "!" are visible on the display:*

MESSAGE	CAUSES	SOLUTIONS
"EXCIT.SPEED HIGH"	This message should never be displayed.	Send sensor + converter to the nearest assistance centre for the necessary verifies.
"EXCITAT.FAILURE"	The excitation circuitry (connecting cables and/or sensor's coils) results interrupted. In this circumstance the flow rate measurement is not possible.	Check the integrity of the connecting cables between the sensor and the converter, the tightening of the wires on the terminals, the resistance value of the sensors's coils (between 30 and 300 ohms).
"FLOW MAX.ALARM"	This message does not indicate an error condition but instead it points out a certain process alarm condition. In other words, it means that the readed flow rate is over the programmed max. alarm threshold and the relative on/off output is activated.	Modify the max. alarm threshold using the function 40 (level 2) if it is not correspondent to the desired output or disable the associated on/off output using the function 29 (level 2) if it is not requested by the process.
"FLOW MIN.ALARM"	This message does not indicate an error condition but instead it points out a certain process alarm condition. In other words, it means that the readed flow rate is under the programmed min. alarm threshold and the relative on/off output is activated.	Modify the min. alarm threshold using the function 41 (level 2) if it is not correspondent to the desired output or disable the associated on/off output using the function 30 (level 2) if it is not requested by the process.
"PIPE EMPTY"	The measure pipe (sensor) is empty, the electrodes connecting cable is broken, the sensor or liquid grounding is poor or inefficent, the empty pipe detection circuitry is not correctly calibrated.	Check carefully the sensor if it is COMPLETELY filled of liquid, check the integrity of the electrodes and the ground connecting cables and the tightening of the wires in the terminals. If the connections are OK and the sensor is surely filled, calibrate the empty pipe detection circuitry using the function 73 (level 2), as described in the

		manual.
"FLOW RATE >F.S."	The measured flow rate value is greater than the full scale set.	Modify the full scale value using the function 01 (level 1).
"IMP./FREQ.>F.S."	The parameters set in the converter cause the generation of a number of totalizing pulses greater than that the instrument can deliver. In this situation the pulses in plus are accumulated in memory and they are delivered as soon as possible.	Increase the volume corresponding to one pulse using the function 02 (level 1) or reduce the pulse time using the function 03 (level 1) accordingly with the external used pulse-counter capability.

MESSAGE	CAUSES	SOLUTIONS
"ADC OVERFLOW"	The sensor is empty, the electrodes connecting cable is broken, the liquid or the sensor grounding is poor or inefficient, the empty pipe detection circuitry is not correctly calibrated, the measure is strongly disturbed by external causes.	Check carefully the sensor if it is COMPLETELY filled of liquid, check the integrity of the electrodes and the ground connecting cables and the tightening of the wires in the terminals. If the connections are OK and the sensor is surely filled, calibrate the empty pipe detection circuitry using the function 73 (level 2), as described in the manual. Finally check in the proximity of the sensor if there are devices that could generate strong electromagnetic fields, like welding machines or similar.

*Messages visualized during instrument's start-up:*

MESSAGES	CAUSES	SOLUTIONS
"WATCHDOG FAILURE"	The WATCH-DOG circuitry is defective.	Send the converter to the assistance centre for repairing.
"KEYBOARD ERROR"	A key was pressed during the start-up procedure or the keyboard is defective or damaged.	Check if the keys are locked or depressed. If the defect remains, send the converter to the assistance centre.
"DATA NOT VALID"	The configuration data contained in the EEPROM are not valid. This may be caused by a defective EEPROM or by very strong electromagnetic noises.	In the EEPROM exists another copy of the configuration data that is used in this situation. Turn off and on again the converter: if this message still remain, send the converter to the assistance centre.
"INITIALIZE ERROR"	An internal damage has occurred and all the configuration data are lost (also the second copy used for safety).	Send the converter to the assistance centre.
"EEPROM ERROR"	The EEPROM chip is damaged or defective.	Send the converter to the assistance centre.

#### APPENDIX 4: INCONVENIENCES AND SOLUTIONS

SYMPTOMS	DIAGNOSIS AND SOLUTIONS
The zero reading in absence of flowrate is unstable	<p>Check the grounding of sensor and liquid.</p> <p>Via Function 37 (lev. 2) bring its parameter to, at least, 2%.</p> <p>Via Function 5 (lev. 0) increase its parameter of 0,5 seconds.</p>
The external pulse counter does not count, even in presence of flowrate inside the pipe.	<p>1.- If the display shows the presence of flowrate:</p> <p>a) a volume per pulse too small may have been preset, or there is a flowrate too high and the beat frequency is higher than the pulse counter capability (see APPENDIX 2 paragraph A2.3). <b>Increase the unit of volume</b> (Function 2) until you reach a frequency compatible with the pulse counter used.</p> <p>b) a pulse time t1 too high compared to the desired frequency, may have been preset; or it may be too short for the pulse counter chosen. Recalculate according to paragraph A2.3 and <b>modify t1</b> (Function 3).</p> <p>c) the pulse counter has not been correctly connected. <b>Check</b> connections (see fig. 3 and fig. 5). You may ask to the Assistance.</p> <p>d) presetting fault: via Function 14 (lev. 2) check if the “<b>pulses</b>” output has been preset.</p> <p>2.- If the display shows null flowrate:</p> <p>a) the empty pipe alarm has occurred. <b>Disable the alarm via Function 24</b> and in case the display starts to indicate the flowrate, please adjust parameters by Functions 73 and 78 before enabling again this alarm (see Appendix 2, paragraph A2.7).</p> <p>b) there is a high zero offset. Check it and possibly carry out the “<b>autozero</b>” <b>calibration</b> according to Appendix 2, paragraph A2.8.</p>
The flowrate reading is very unstable.	<p>1 - There is no grounding of sensor and liquid. <b>Perform</b> it according to 7.4.</p> <p>2 - The liquid conductivity is too low. <b>Ask to the Assistance.</b></p> <p>3 - The totalizing threshold (Function 37) is too low. <b>Increase it.</b></p> <p>4 - There is air in the pipe or steam for pressure next to zero. Choose a <b>more suitable position</b> for the sensor (see paragraph 7.1). Sometimes the problem may be momentary solved by closing partly the valve downstream of the meter.</p> <p>5 - Presetting faults:  via Function 5 (lev. 0) increase its parameter of 0,5 seconds;  via Function 38 (lev. 2) decrease its parameter of 50%;  via Function 39 (lev. 2) increase its parameter of 50%.</p>
The display is off.	<p>1.- There is no power supply voltage. Check the value on the converter data plate and <b>activate the power supply</b> (12.1.E).</p> <p>2.- The fuse is broken. Switch off the converter, replace the fuse (see 12.1.F), close the cover, switch on the converter.</p>
With empty pipe, the display shows flowrate / the totalizer	<b>Enable</b> the “empty pipe” Function (see Appendix 2, paragraph A2.7).

moves.	
With motionless liquid, the display shows flowrate / the totalizer moves.	Carry out the “autozero” <b>calibration</b> via Function 47 (lev. 2) (see Appendix 2, paragraph A2.8).

THE DOCUMENTS CONCERNING TO THE SERIAL COMMUNICATIONS PERFORMABLE BY MC 106 ARE COLLECTED IN TD 155/ENG MANUAL, WHICH CAN BE REQUIRED TO THE SUPPLIER COMPANY.